

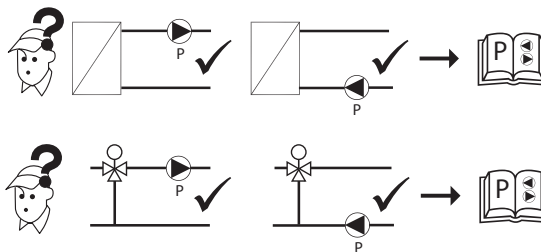
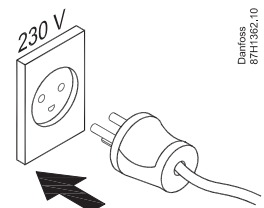
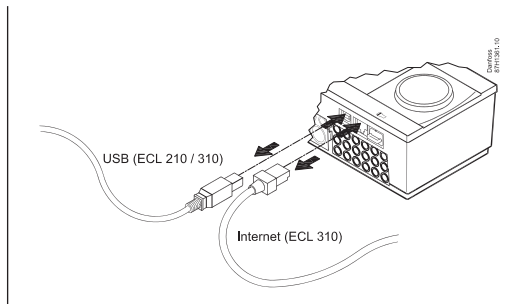


Installation Guide


ECL Comfort 310, A376 (code no. 087H3810)

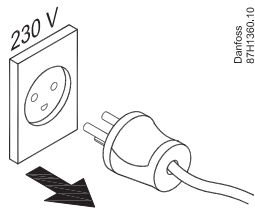


A376.1, ex. a:

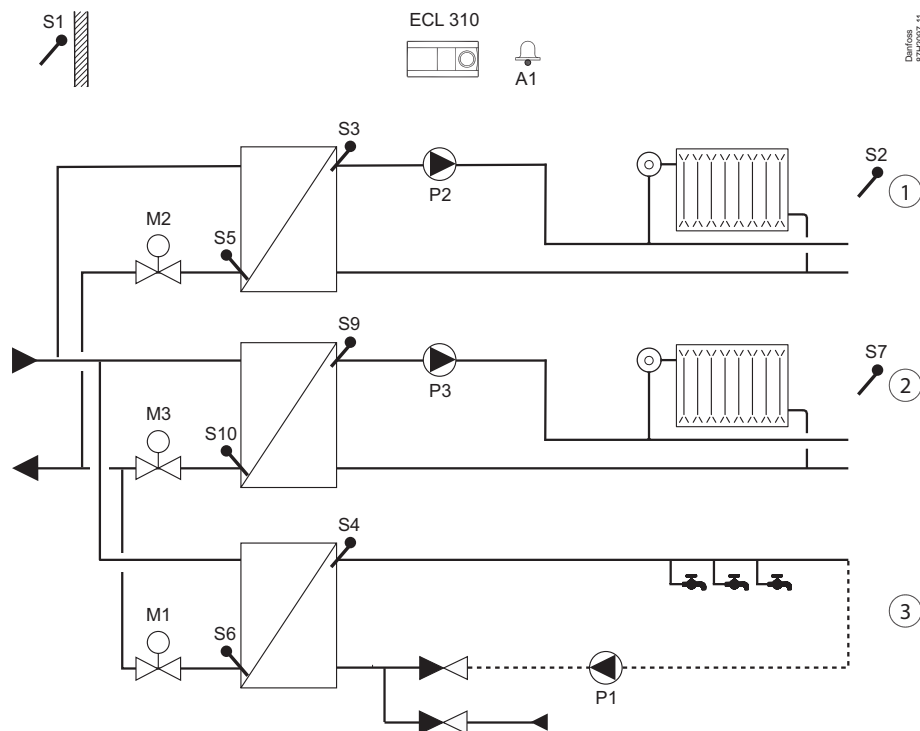


A376.1, ex. b:

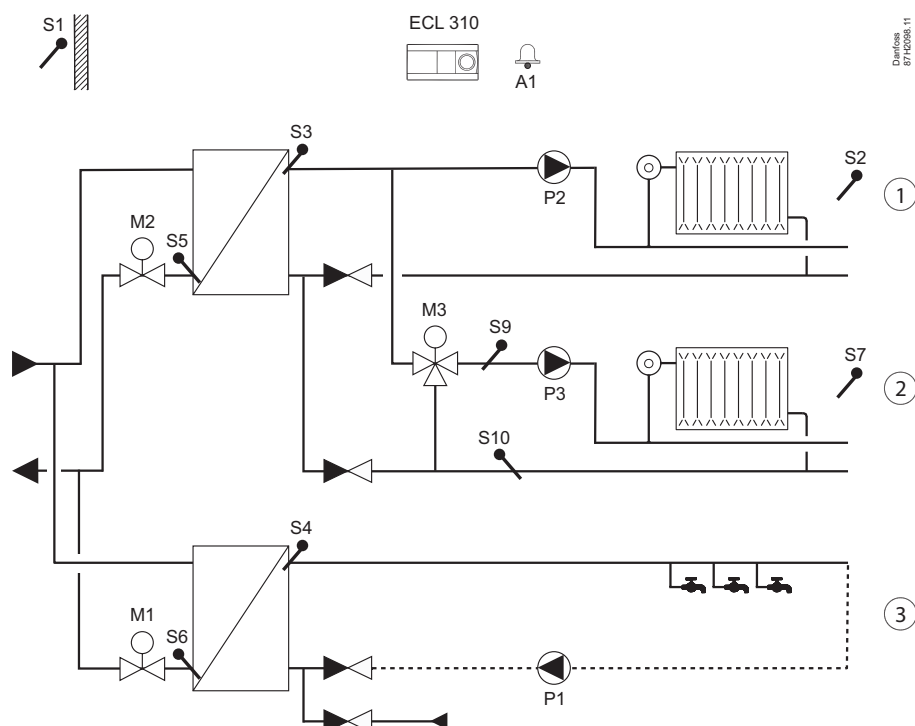


A376.2, ex. a:

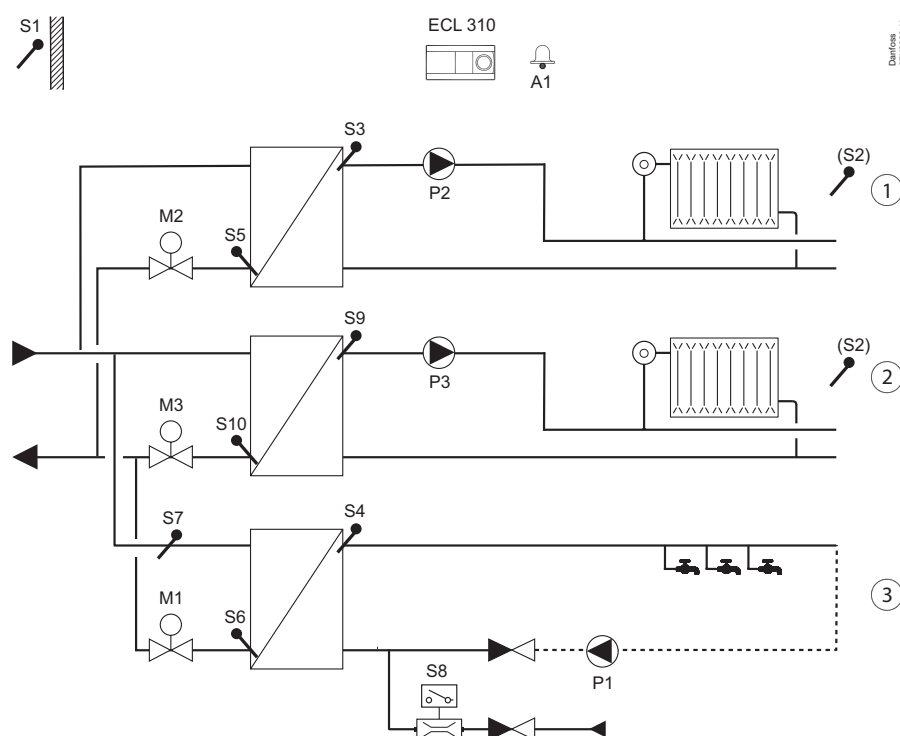


A376.2, ex. b:

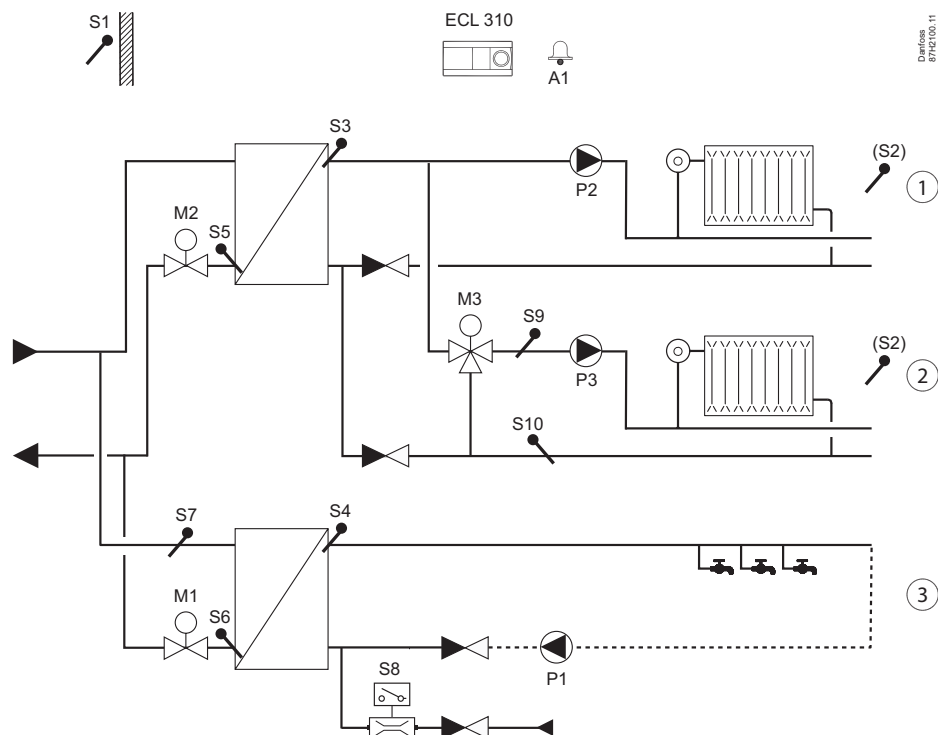


A376.3, ex. a:

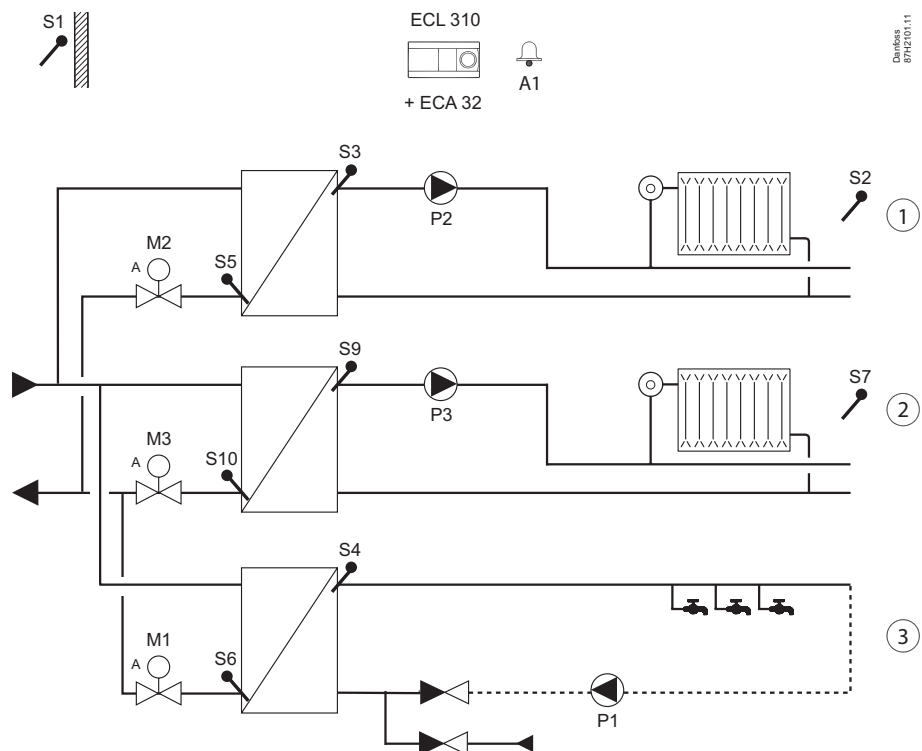


A376.3, ex. b:

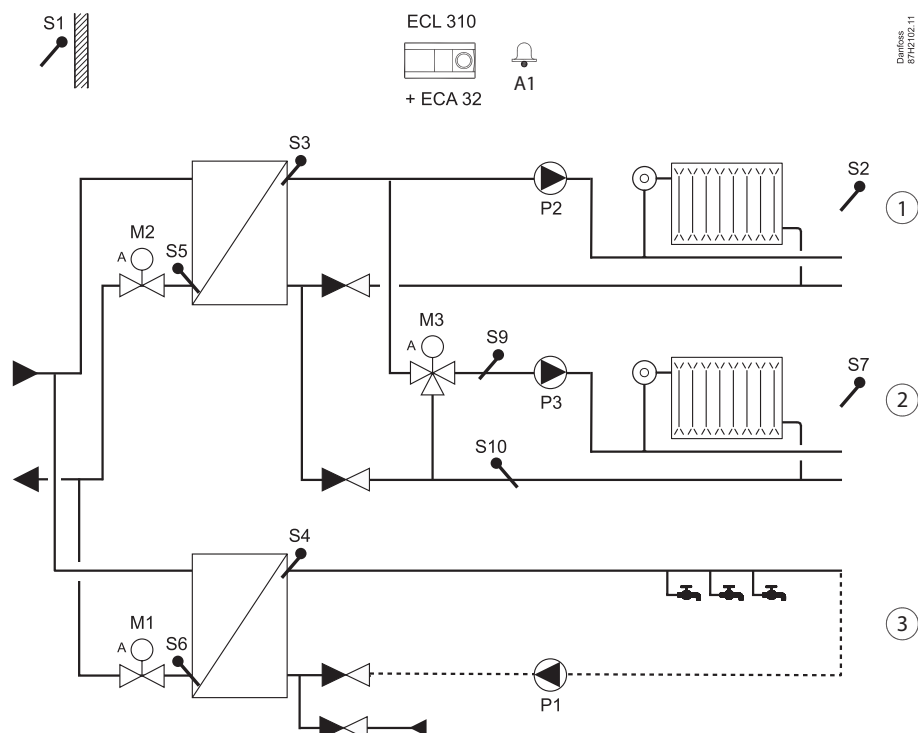


A376.4, ex. a:

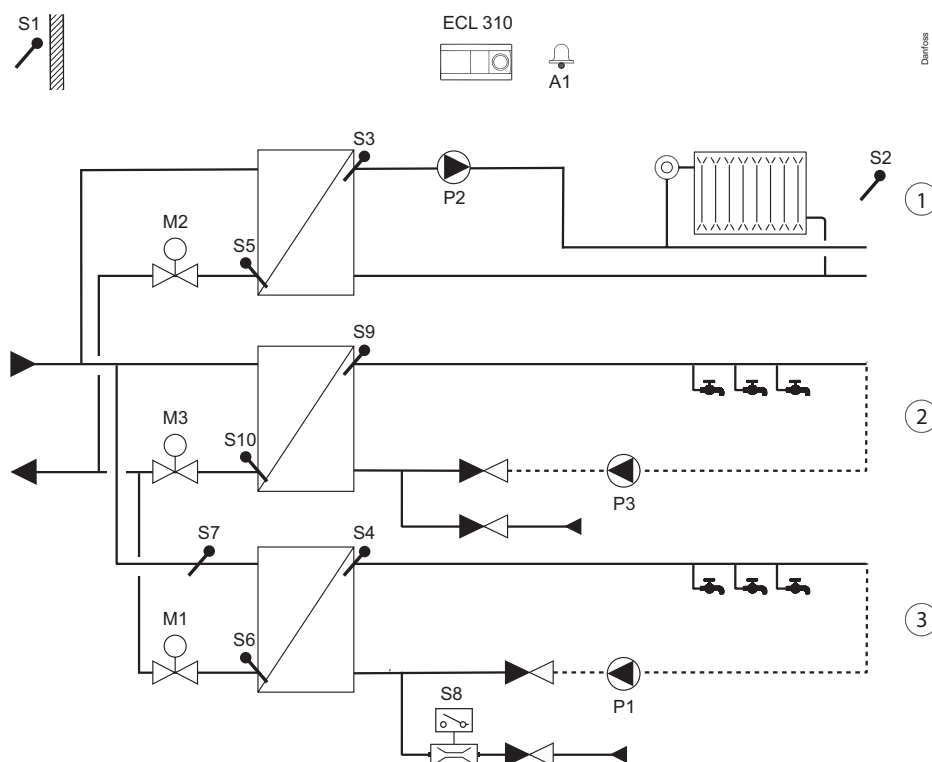



A376.9, ex. a:

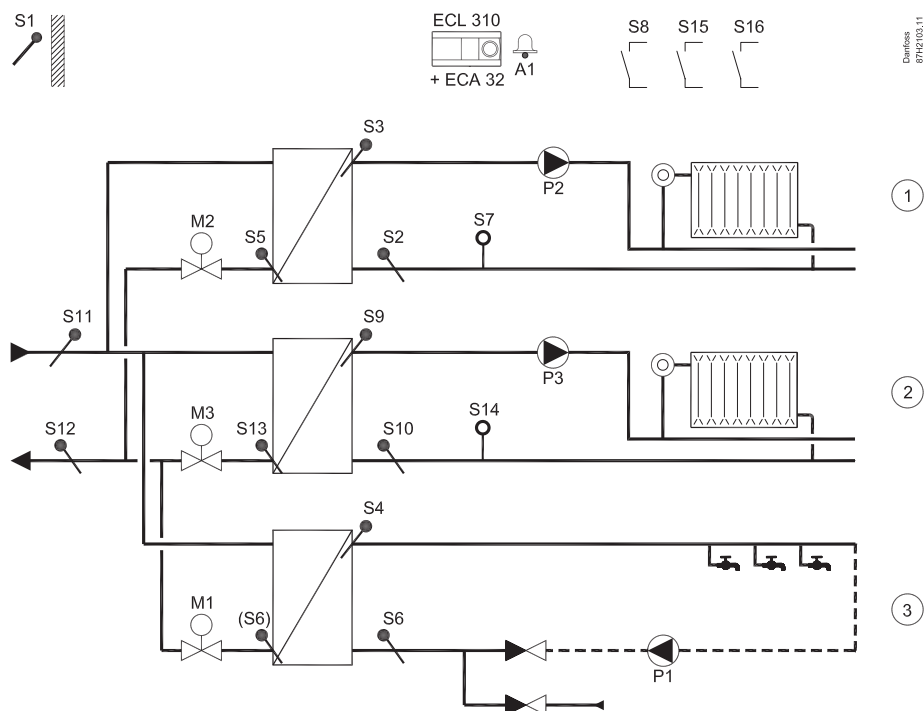

A376.9, ex. b:

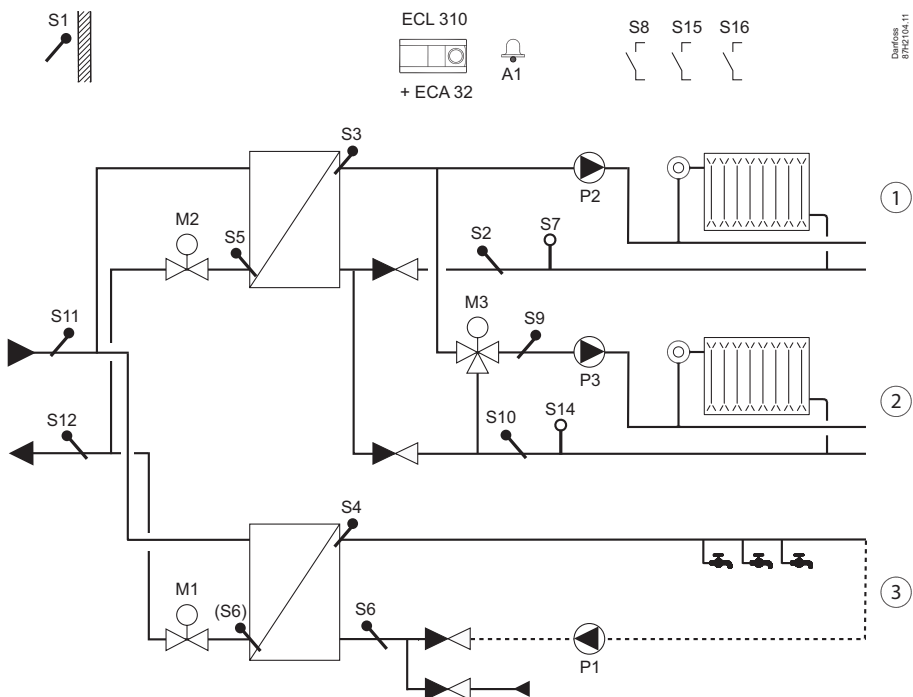


A376.10, ex. a:

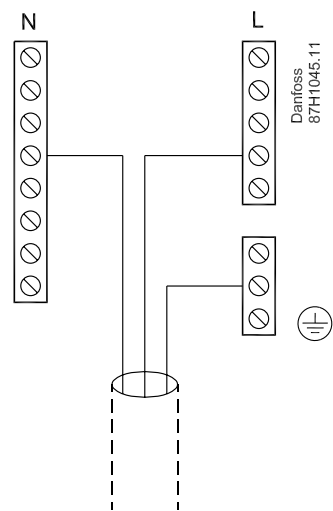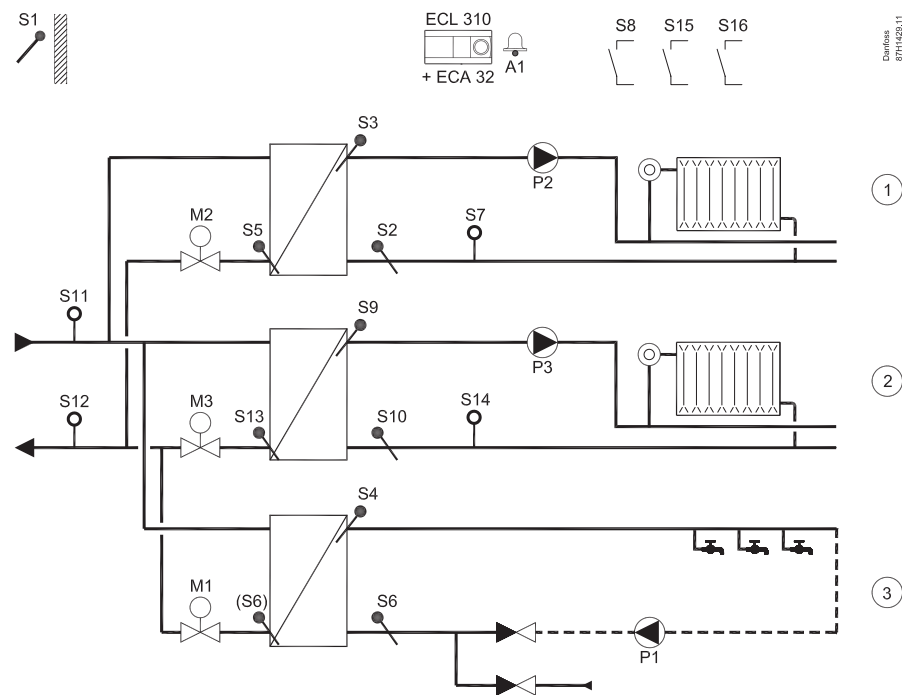


ECL Comfort 310:
230 V a.c.

R	4 (2) A / 230 V a.c.
R	
Tr	0,2 A / 230 V a.c.


230 V a.c. - A376.1, A376.2, A376.4

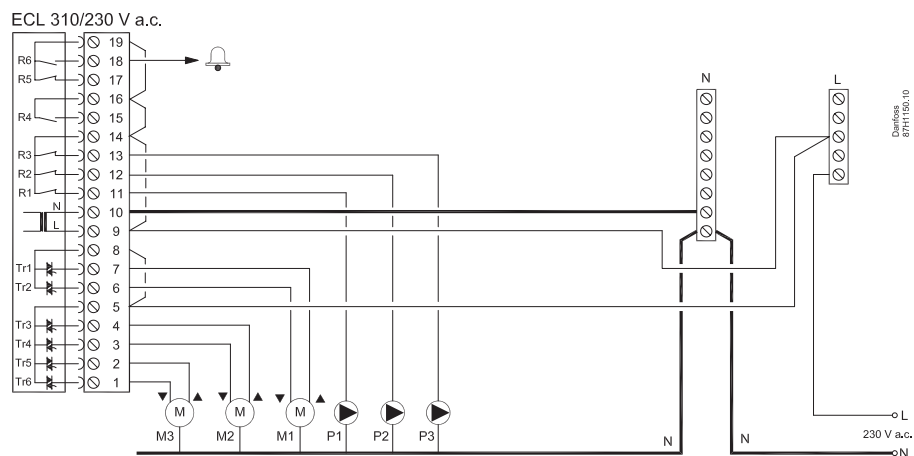


230 V a.c. - A376.3

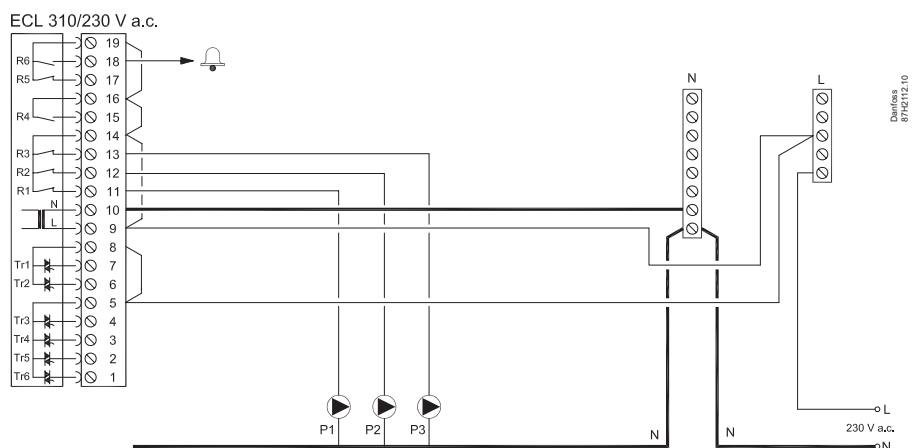

230 V a.c. - A376.9, A376.10




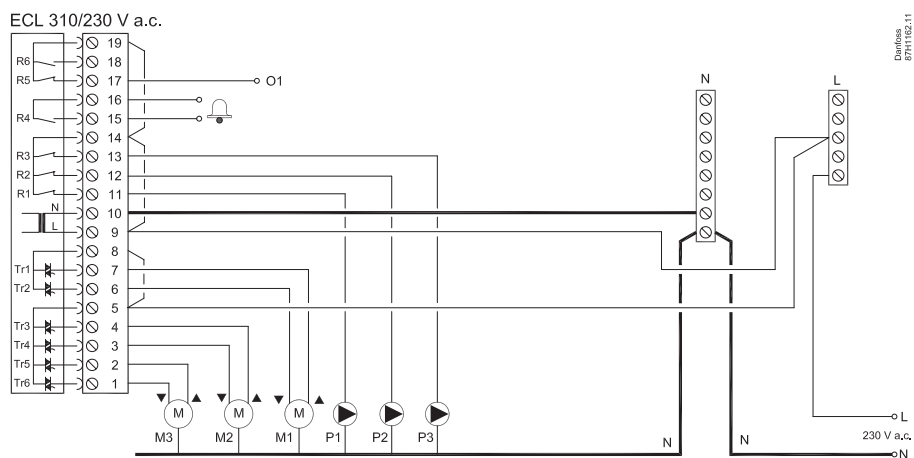


A376.3 - ECA 32


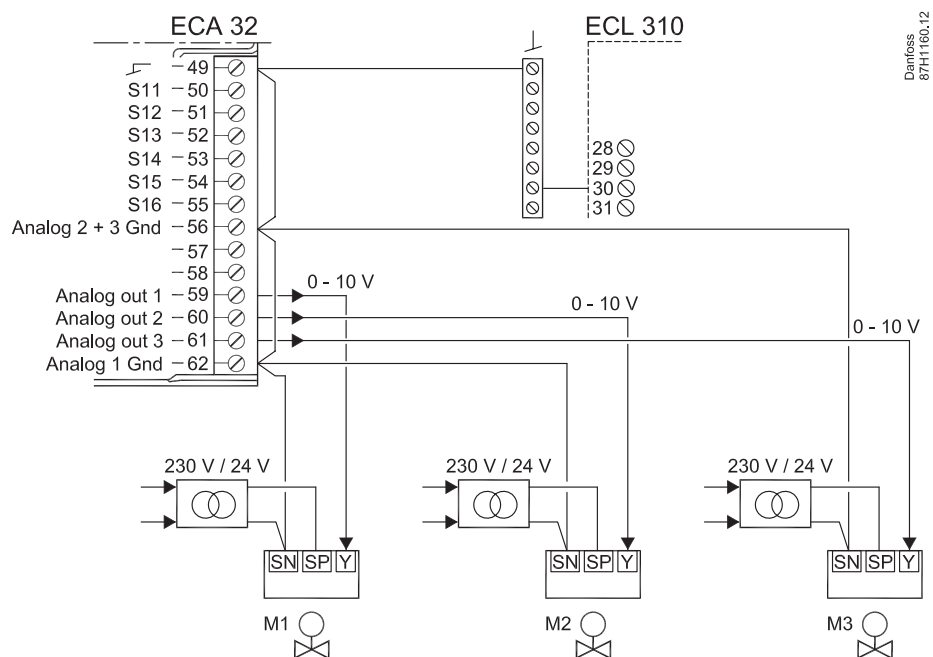


230 V a.c. / 24 V a.c. safety thermostat

1-step closing

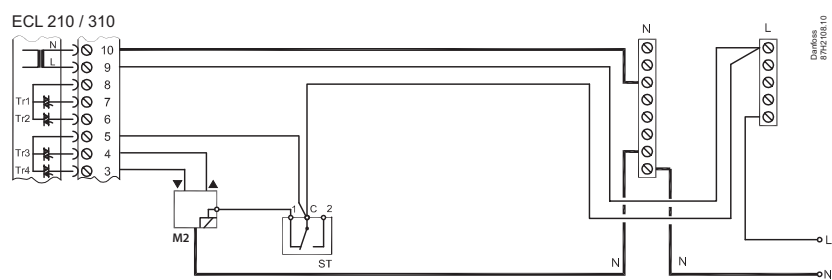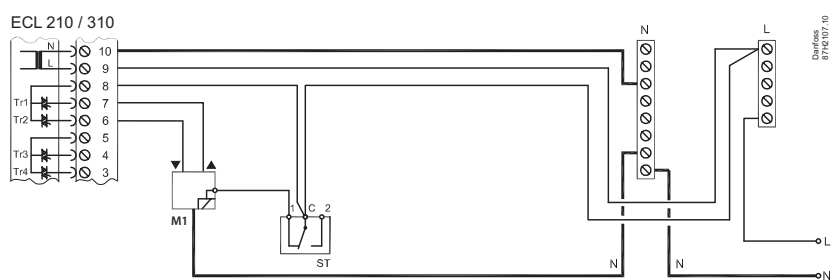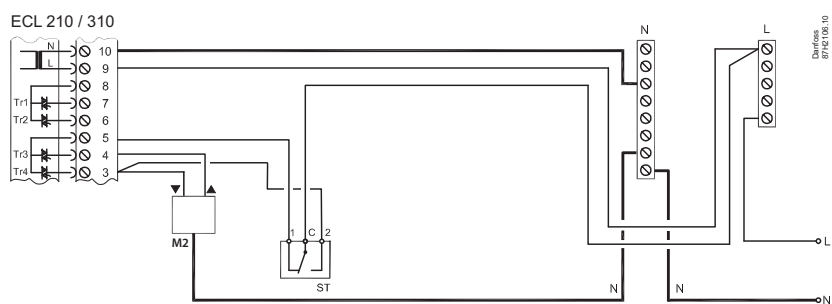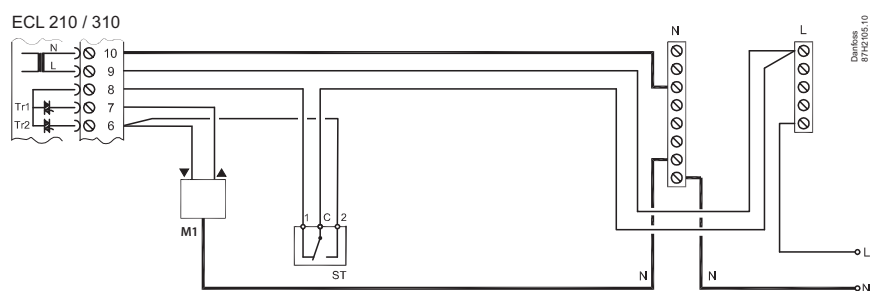


230 V a.c. / 24 V a.c. safety thermostat
2-step closing

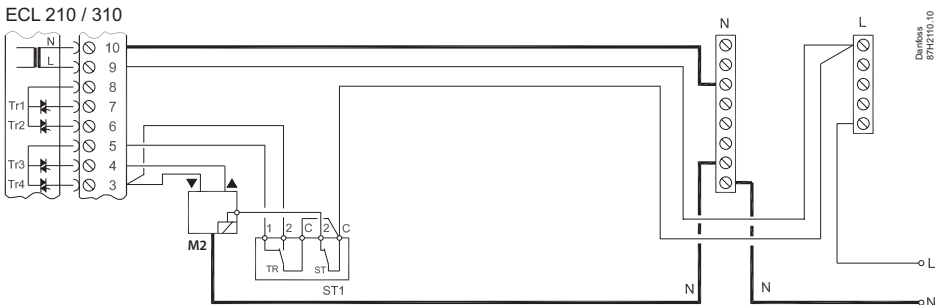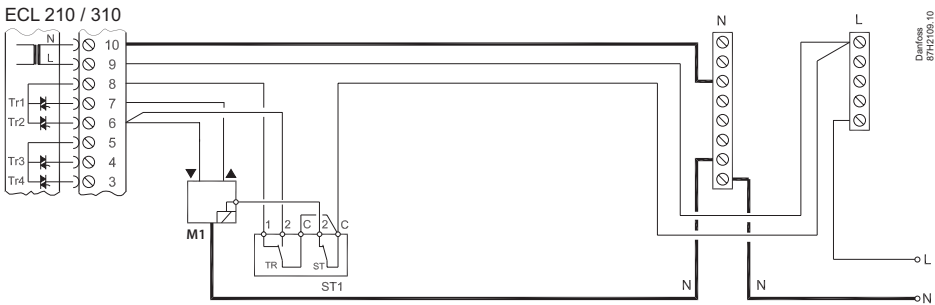


ECL Comfort 310:
24 V a.c.

R 	4 (2) A / 24 V a.c.
R 	
Tr 	1 A / 24 V a.c.


24 V a.c. - A376.1, A376.2, A376.4

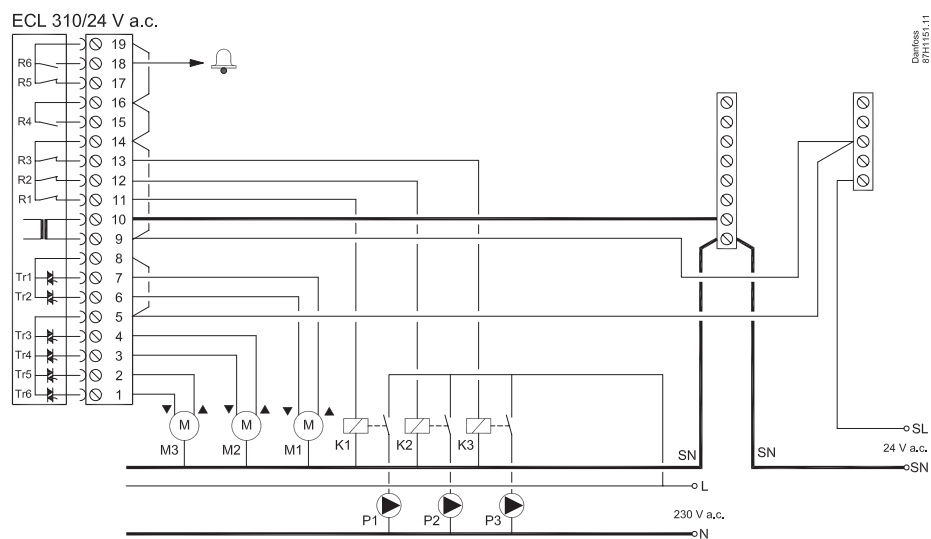


24 V a.c. - A376.3

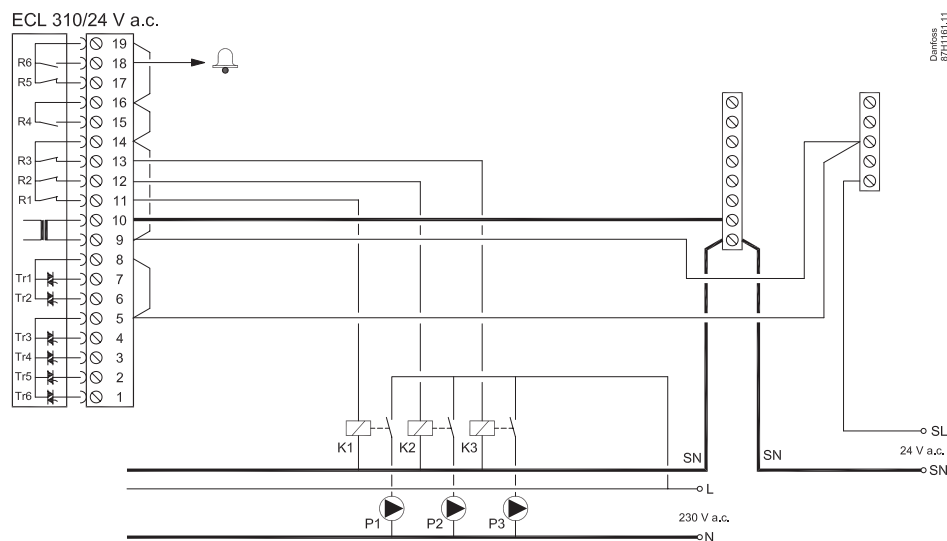

24 V a.c. - A376.9, A376.10

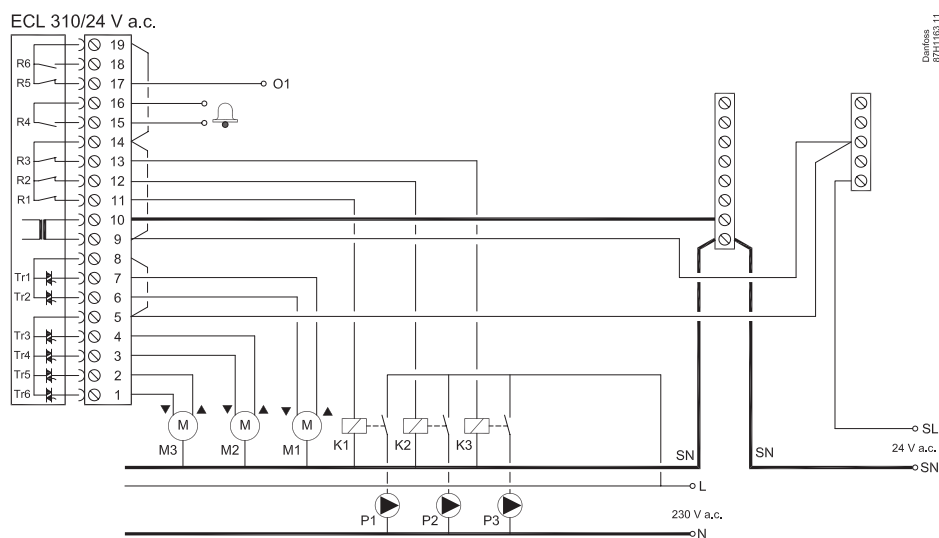


A376.3 - ECA 32

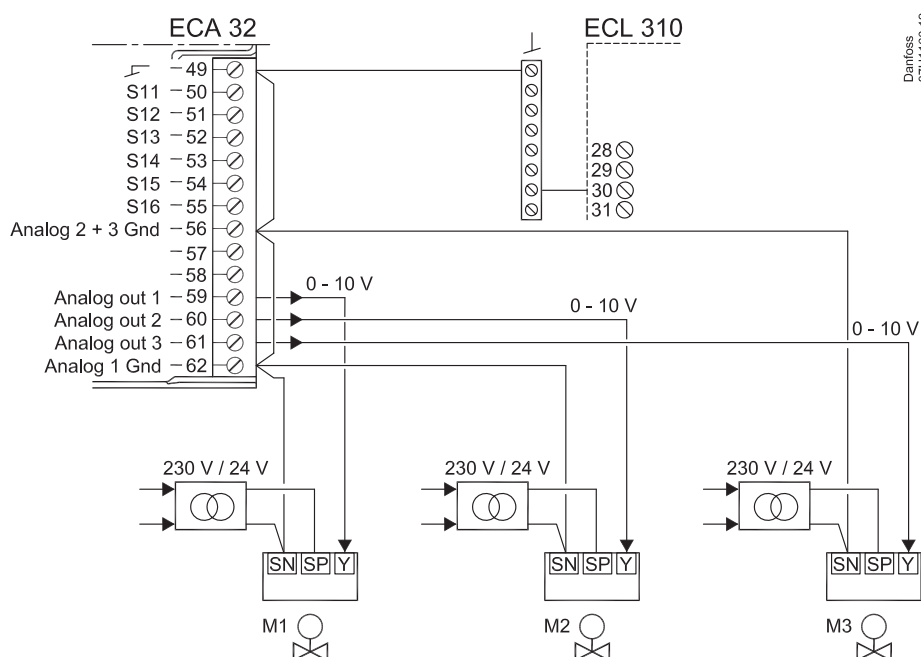


ECL 310

Pt 1000 (1000 Ω / 0 °C)

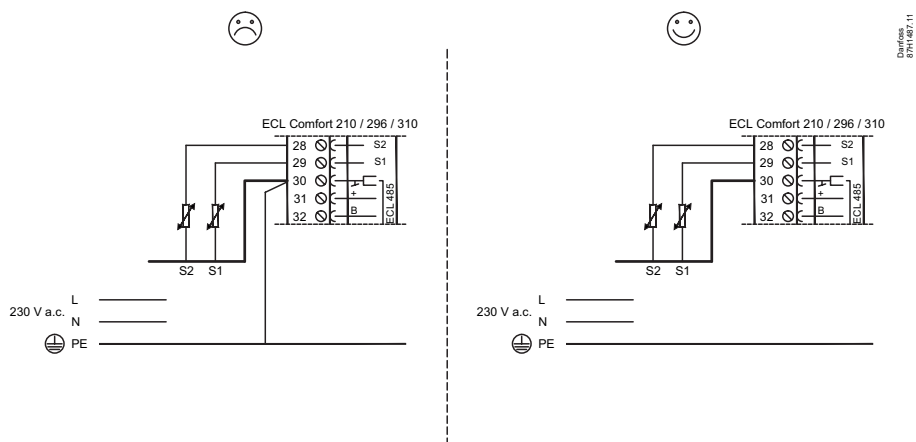


	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10
A376.1	✓	✓	✓	✓	✓	✓	✓		✓	✓
A376.2	✓	✓	✓	✓	✓	✓	✓		✓	✓
A376.3	✓	✓	✓	✓	✓	✓	✓		✓	✓
A376.4	✓	✓	✓	✓	✓	✓	✓		✓	✓
A376.9	✓	✓	✓	✓	✓	✓			✓	✓
A376.10	✓	✓	✓	✓	✓	✓			✓	✓

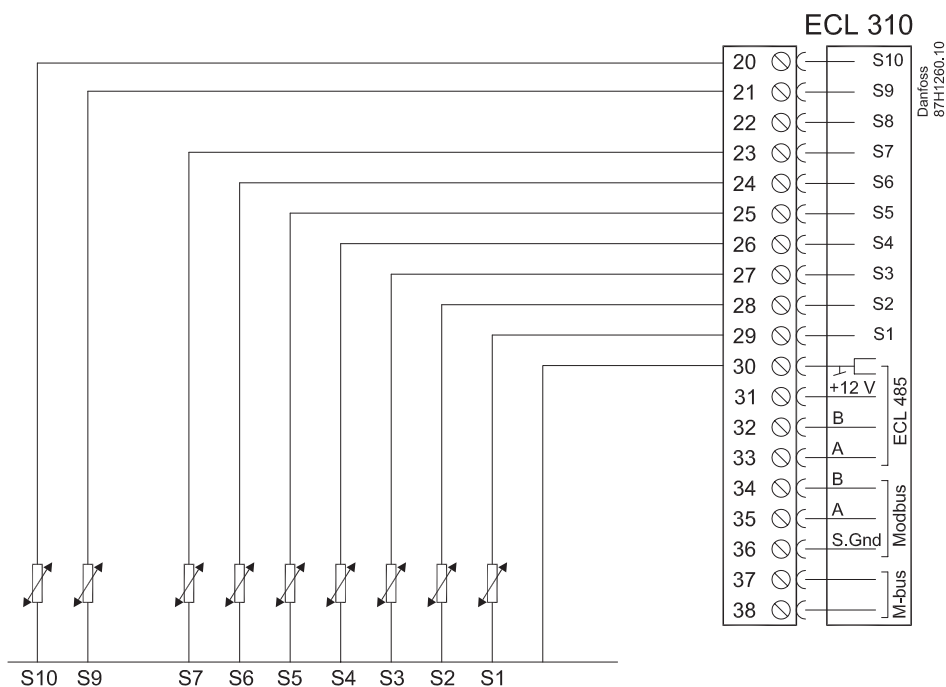

ECL 310




	S8
A376.1	
A376.2	✓
A376.3	
A376.4	✓
A376.9	✓
A376.10	✓

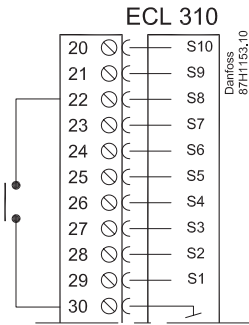


ECL 310



	S7
A376.1	
A376.2	
A376.3	
A376.4	
A376.9	✓
A376.10	✓

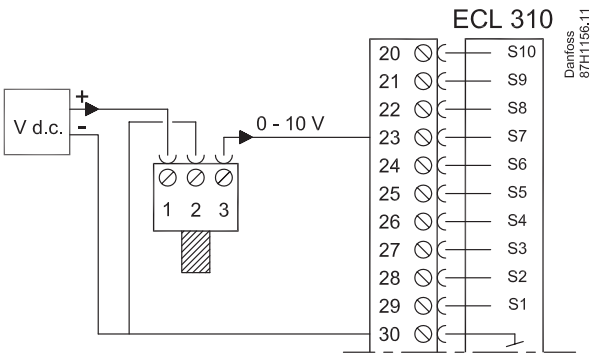

V d.c. = 12 - 24 V d.c.

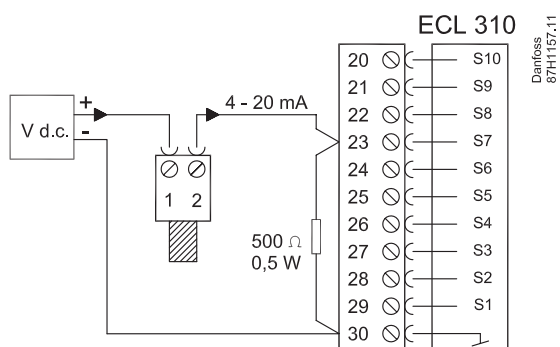


V d.c. = 12 - 24 V d.c.

ECA 32

 **Pt 1000** (1000 Ω / 0 °C)


	S11	S12	S13
A376.1			
A376.2			
A376.3			
A376.4			
A376.9	✓	✓	✓
A376.10			✓

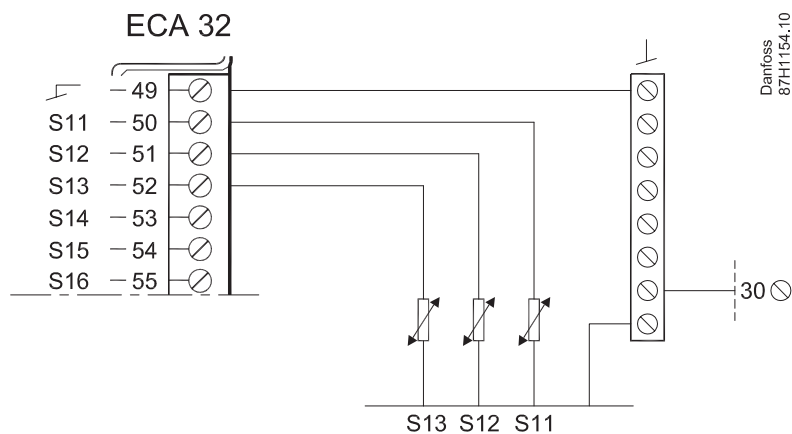

ECA32




	S15	S16
A376.1		
A376.2		
A376.3		
A376.4		
A376.9	✓	✓
A376.10	✓	✓

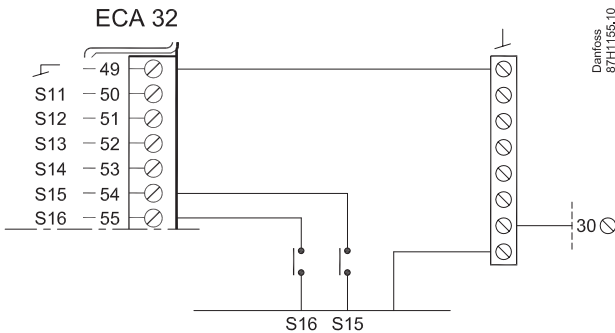


ECA32




	S11	S12	S13	S14
A376.1				
A376.2				
A376.3				
A376.4				
A376.9				✓
A376.10	✓	✓		✓

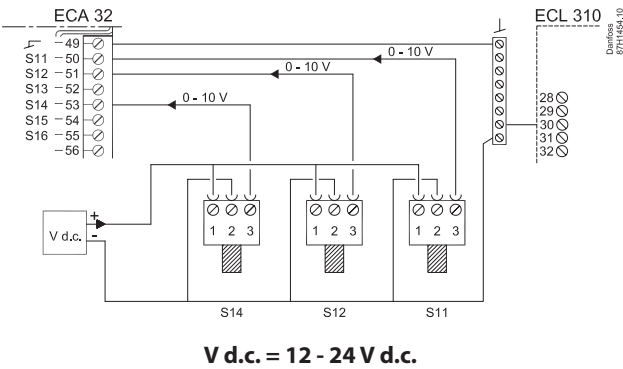


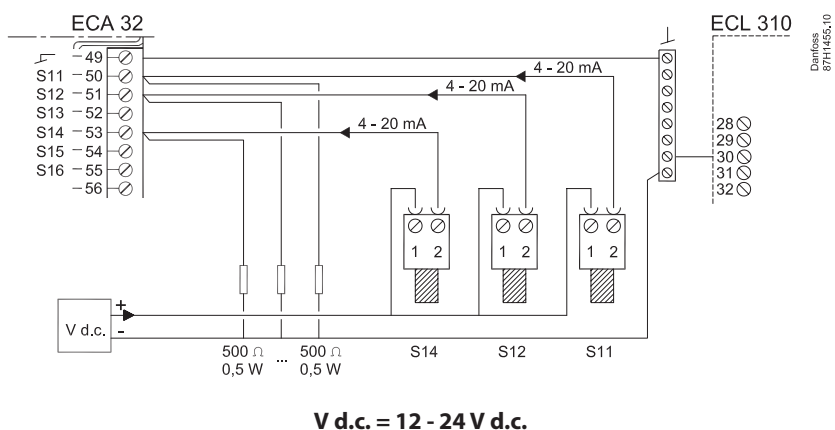


A376.9, A376.10

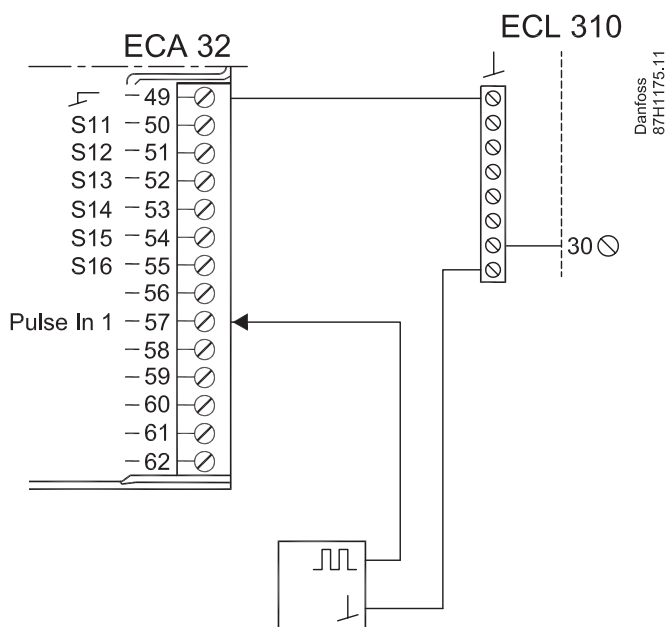


ECA 30 / 31

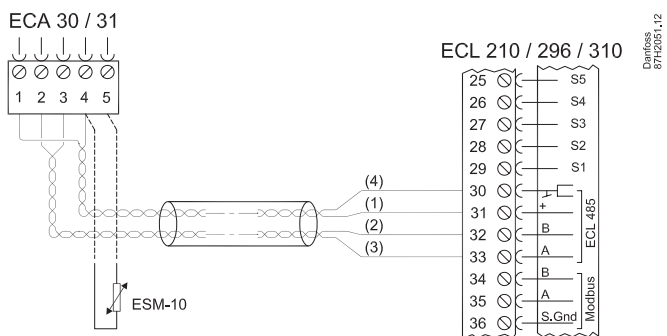


ECA 30 / 31

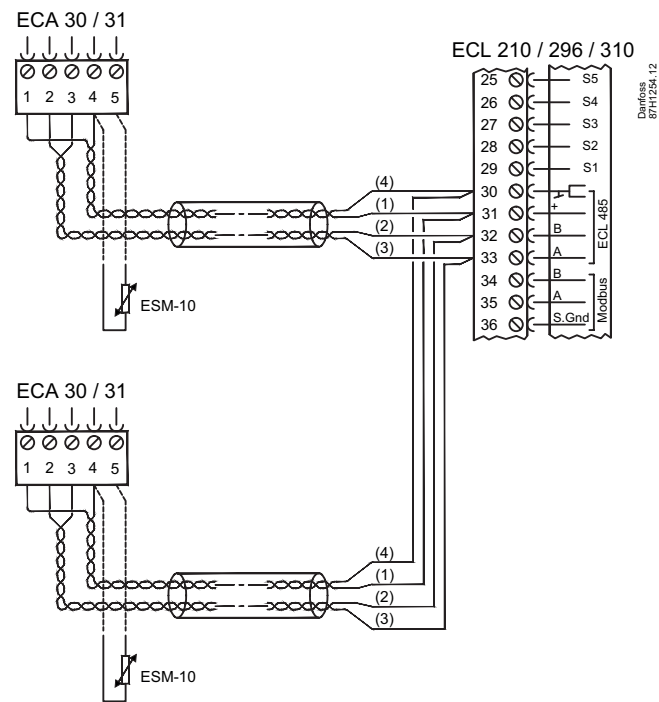


Master / slave

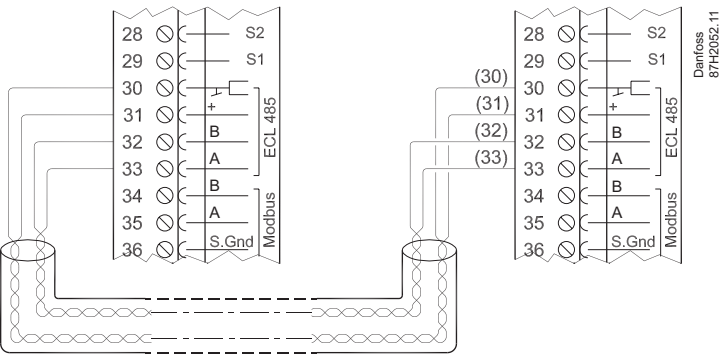


Modbus

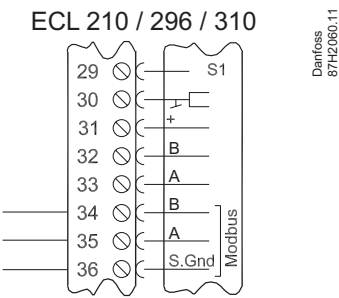


M-bus

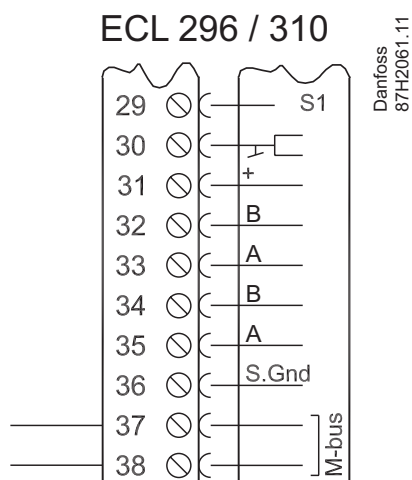


M-bus

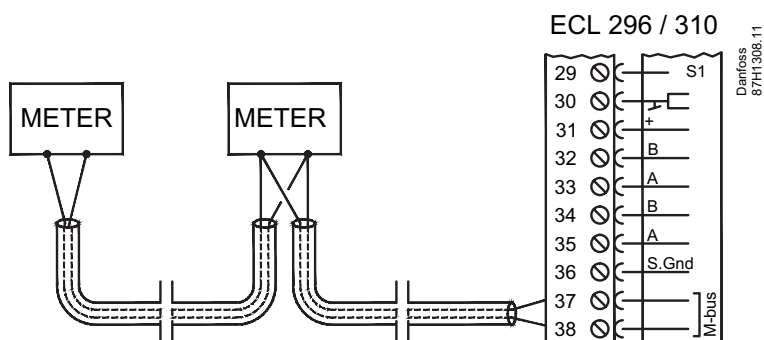

Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

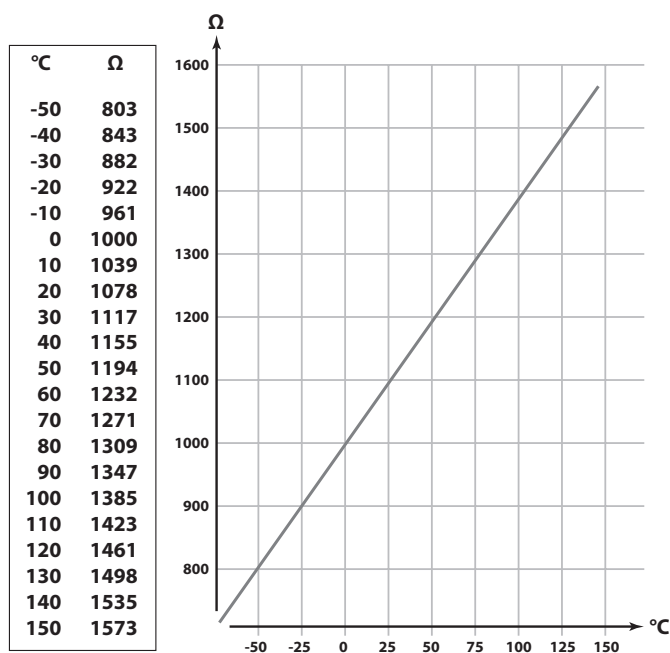


Heat curves

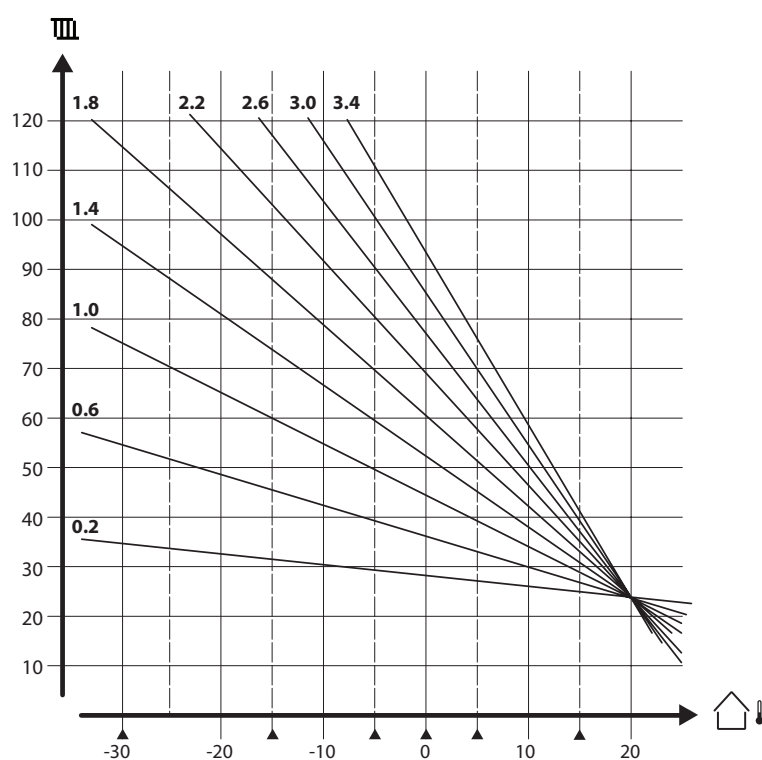


ECA 30


1

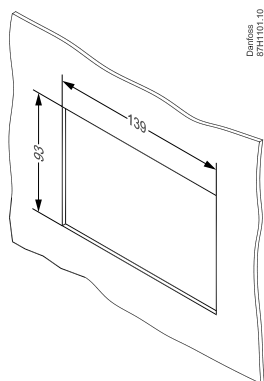


2

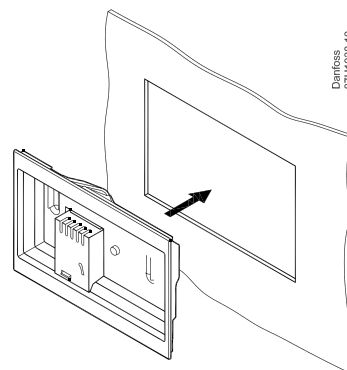


3

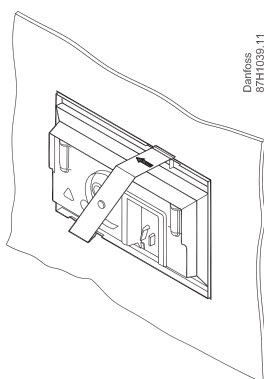


4

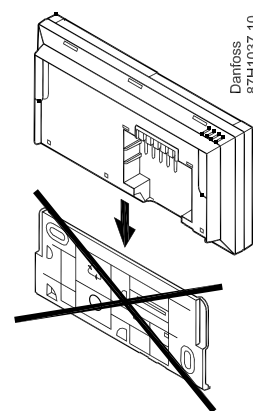


5

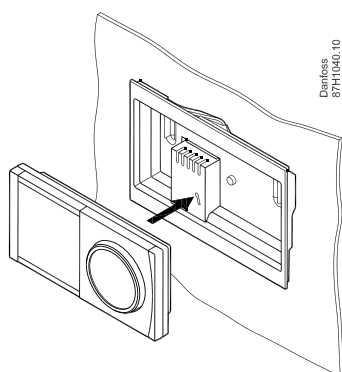


6

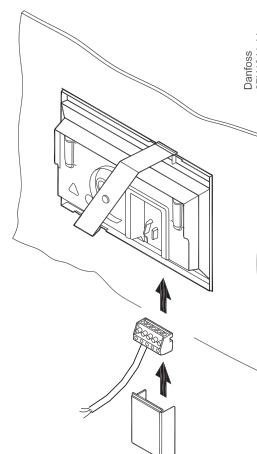

7

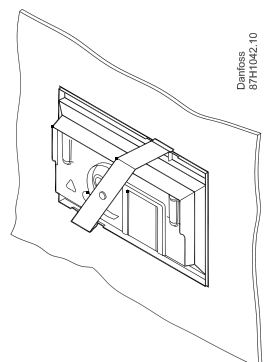


8

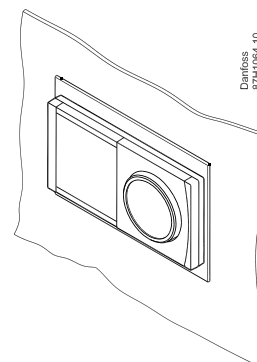


Installation Guide, ECL Comfort 310, A376


Danfoss
87H1021.11

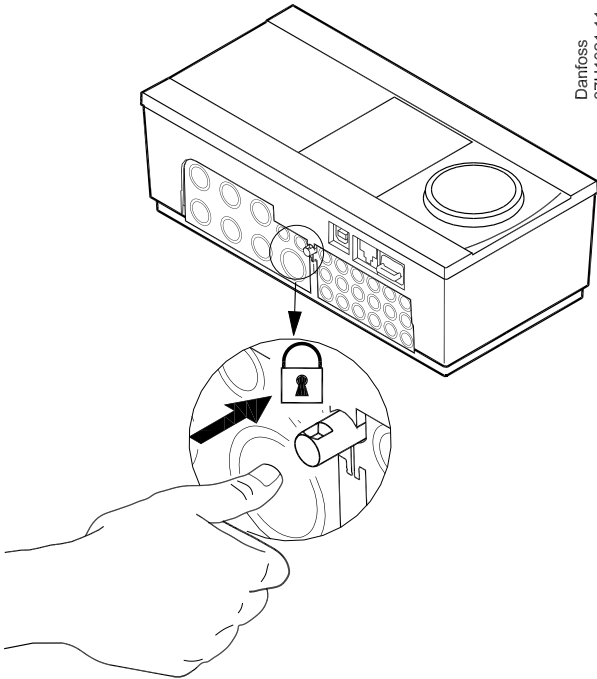


Danfoss
87H1017.11

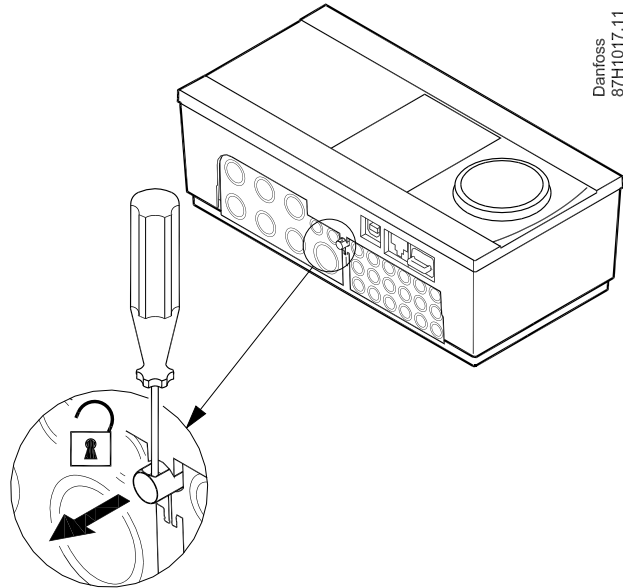

Danfoss
87H1073.11

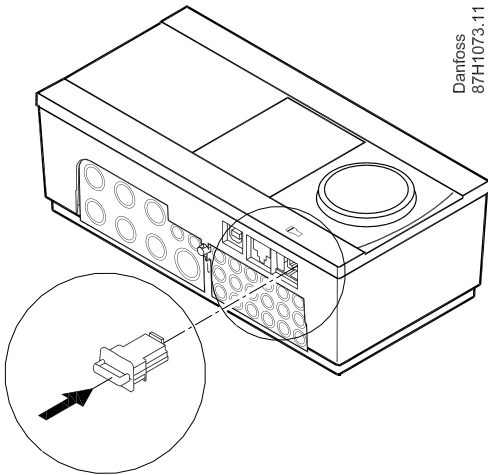

Danfoss
87H1074.11

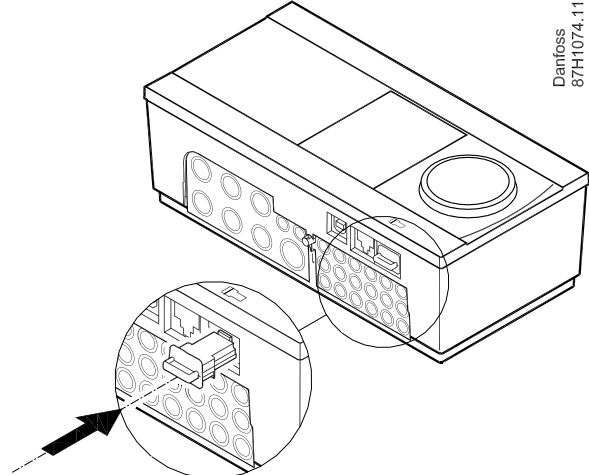

?  **ECL Comfort 310, A376: www.heating.danfoss.com**



Danfoss A/S

Heating Segment • heating.danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.