

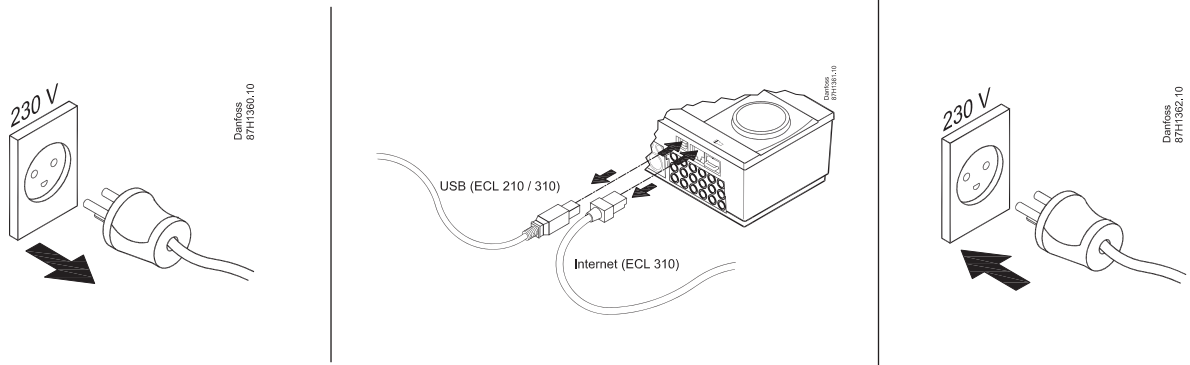


Installation Guide


ECL Comfort 310, A368 (code no. 087H3803)

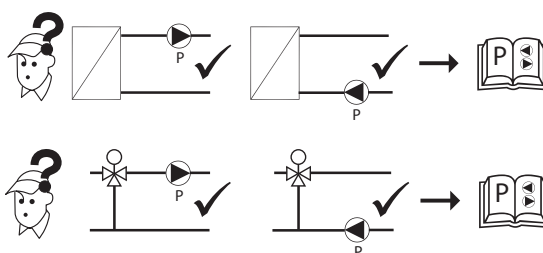


A368.1, ex. a:

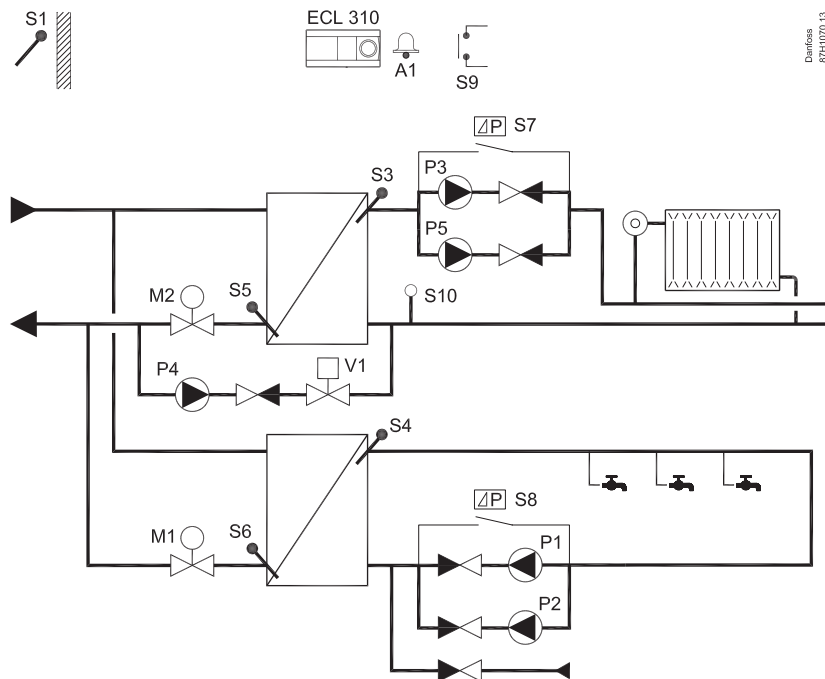


A368.2, ex. a:

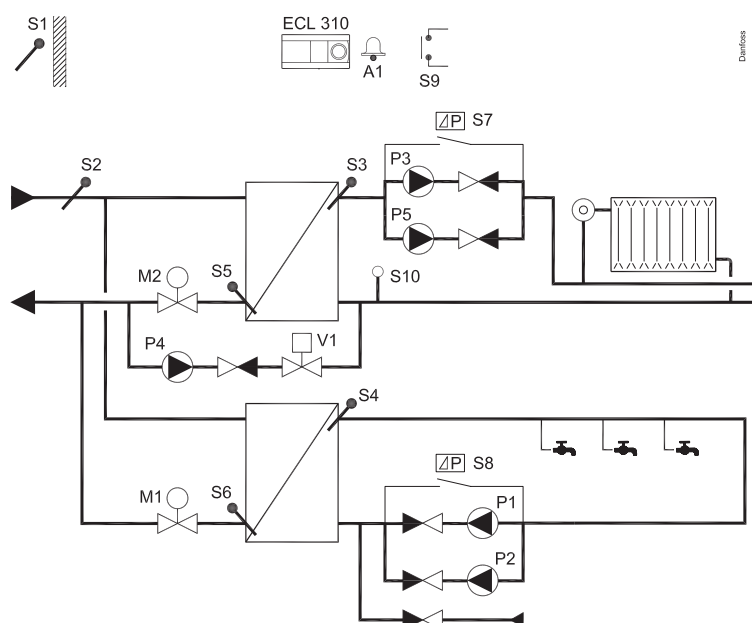

A368.3, ex. a:

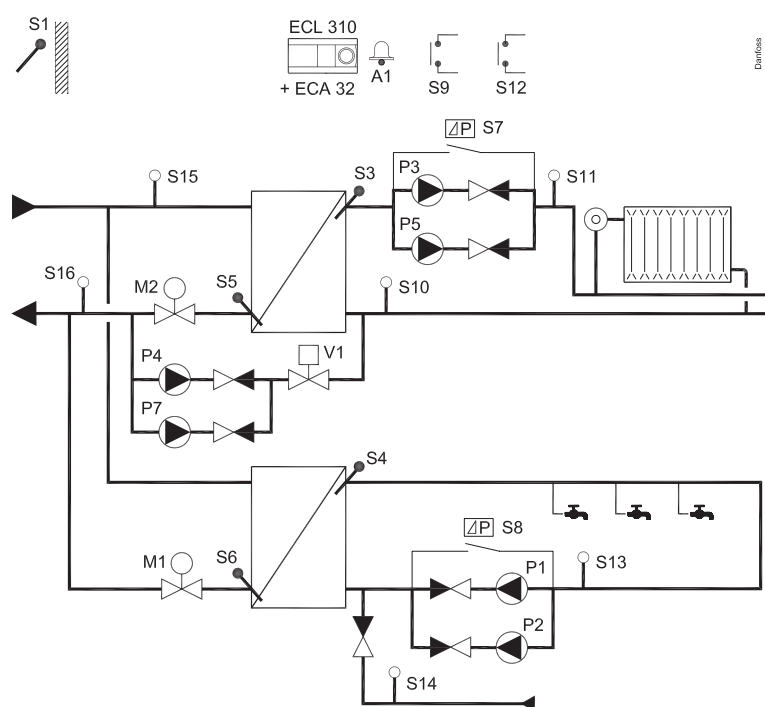


A368.4, ex. a:

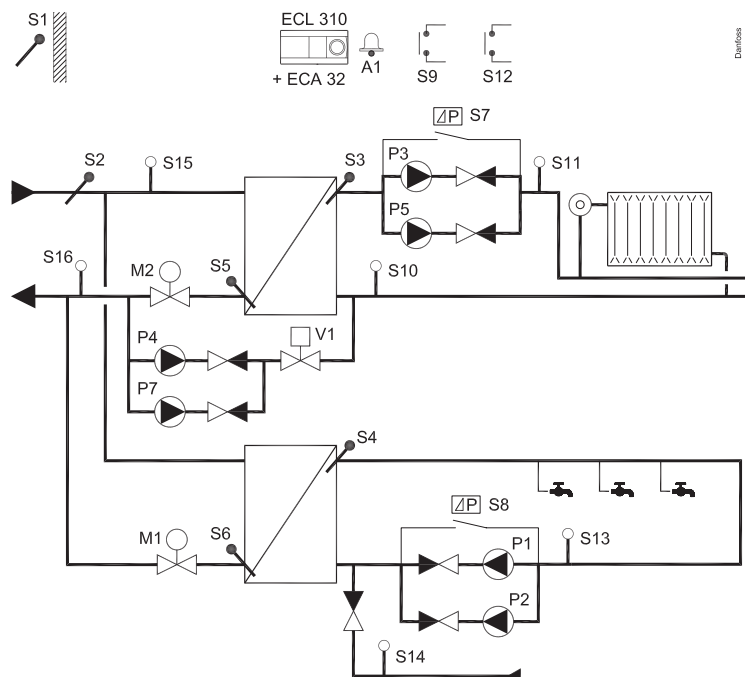


Danfoss
87H1123.12

A368.5, ex. a:

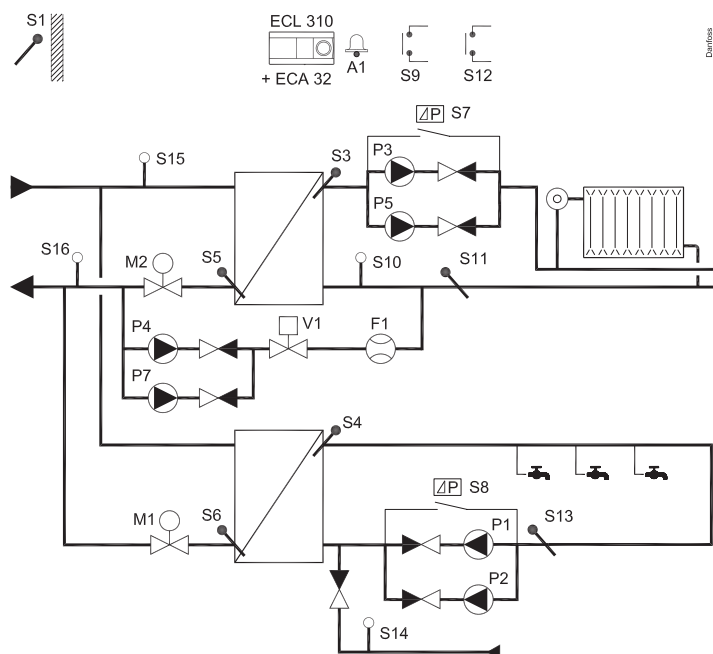


Danfoss
87H1382.11

A368.6, ex. a:

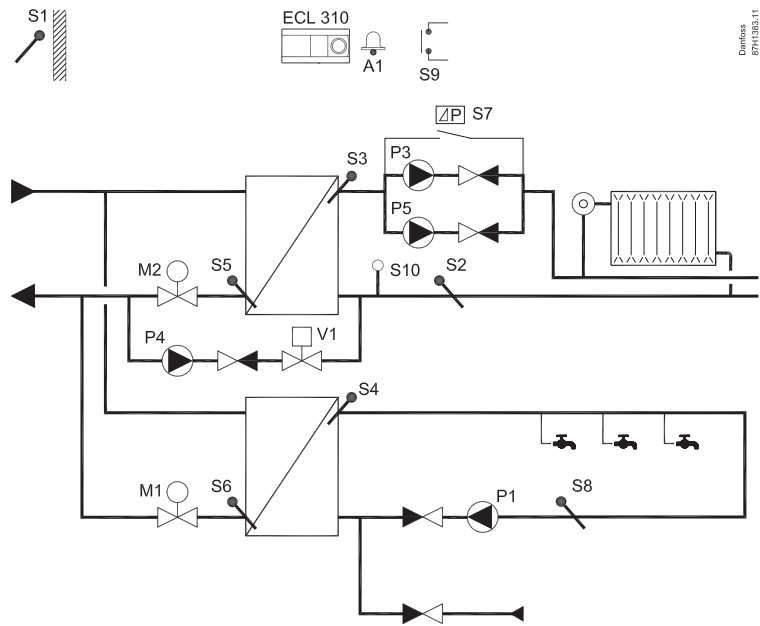

ECL Comfort 310:
230 V a.c.


R	4 (2) A / 230 V a.c.
R	
Tr	0,2 A / 230 V a.c.

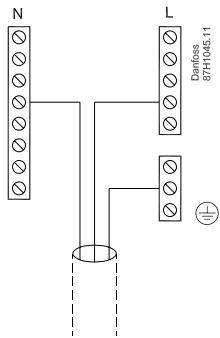

Installation Guide, ECL Comfort 310, A368


230 V a.c., A368 (ECL 310)

	P1	P2	P3	P4	P5
A368.1	✓	✓	✓	✓	✓
A368.2	✓	✓	✓	✓	✓
A368.3	✓	✓	✓	✓	✓
A368.4	✓	✓	✓	✓	✓
A368.5	✓	✓	✓	✓	✓
A368.6	✓		✓	✓	✓

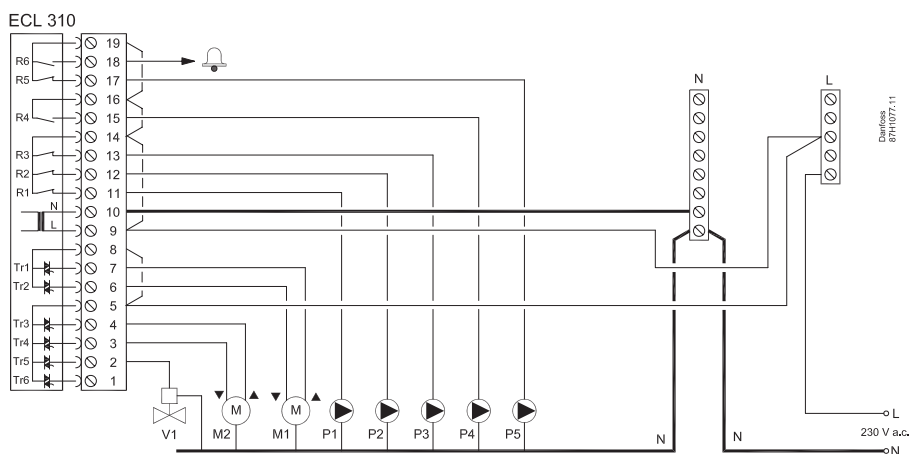

230 V a.c., A368 (ECA 32)

	P7
A368.1	
A368.2	
A368.3	✓
A368.4	✓
A368.5	✓
A368.6	

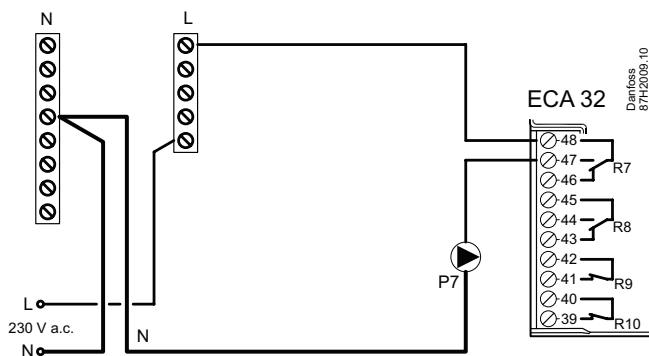



Installation Guide, ECL Comfort 310, A368

ECL Comfort 310:

24 V a.c.


R 	4 (2) A / 24 V a.c.
R 	
Tr 	1 A / 24 V a.c.

24 V a.c. / 230 V a.c. safety thermostat

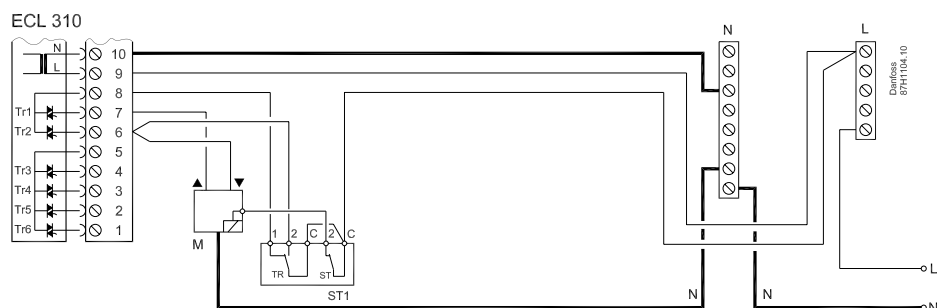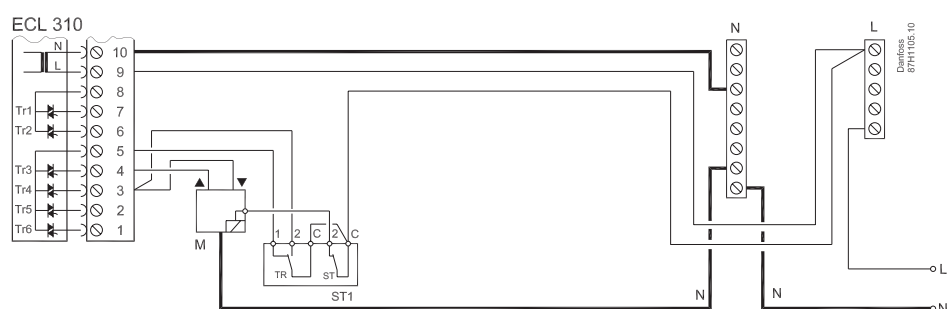


24 V a.c., A368 (ECL 310)

	P1	P2	P3	P4	P5
A368.1	✓	✓	✓	✓	✓
A368.2	✓	✓	✓	✓	✓
A368.3	✓	✓	✓	✓	✓
A368.4	✓	✓	✓	✓	✓
A368.5	✓	✓	✓	✓	✓
A368.6	✓		✓	✓	✓

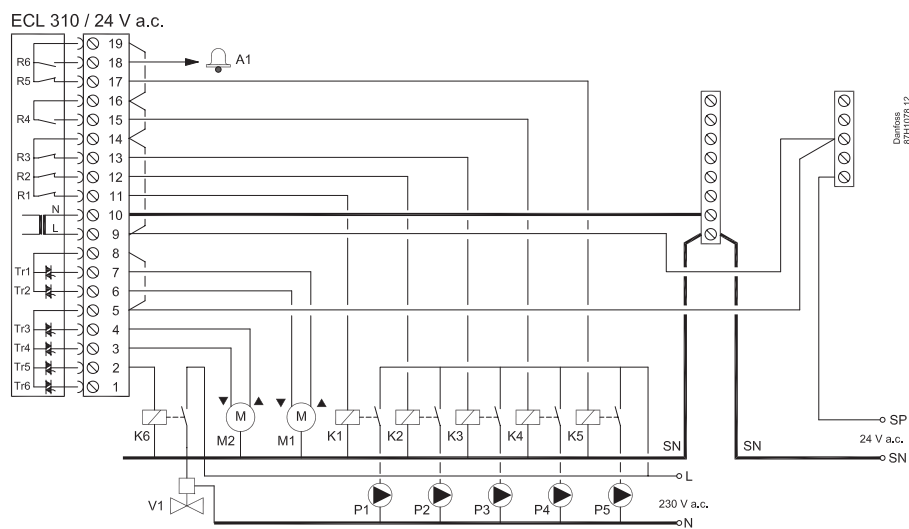



24 V a.c., A368 (ECA32)

	P7
A368.1	
A368.2	
A368.3	✓
A368.4	✓
A368.5	✓
A368.6	

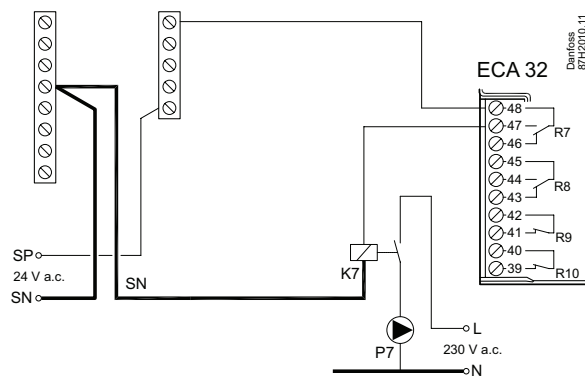

Installation Guide, ECL Comfort 310, A368


 **Pt 1000** (1000 Ω / 0 °C)

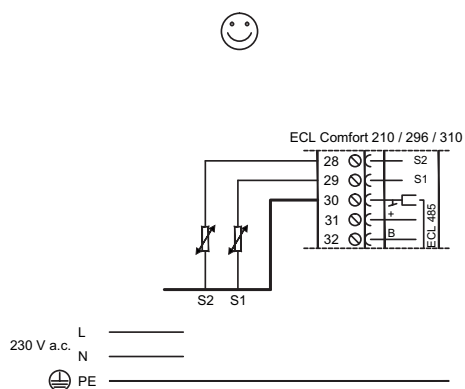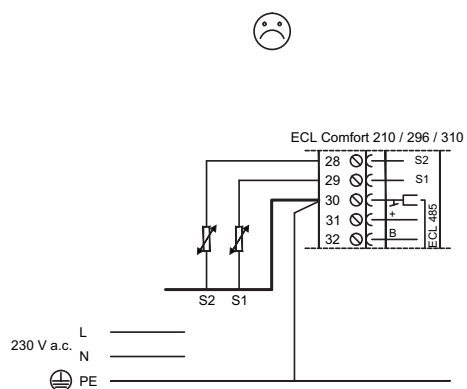

Danfoss
87H1389.11

A368 (ECL 310)

	S1	S2	S3	S4	S5	S6	S7	S8
A368.1	✓		✓	✓	✓	✓		
A368.2	✓	✓	✓	✓	✓	✓		
A368.3	✓		✓	✓	✓	✓		
A368.4	✓	✓	✓	✓	✓	✓		
A368.5	✓		✓	✓	✓	✓		
A368.6	✓	✓	✓	✓	✓	✓		✓

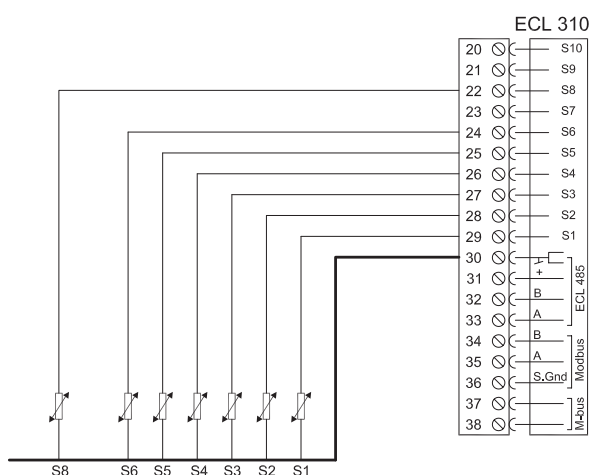


Danfoss
87H1389.11

A368 (ECL 310)




	S10
A368.1	✓
A368.2	✓
A368.3	✓
A368.4	✓
A368.5	✓
A368.6	✓

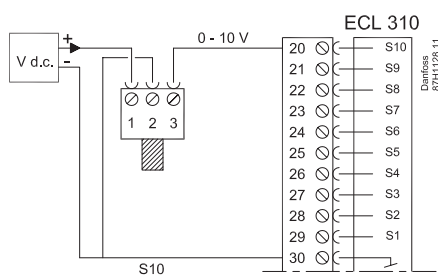


V d.c. = 12 - 24 V d.c.

A368 (ECL 310)

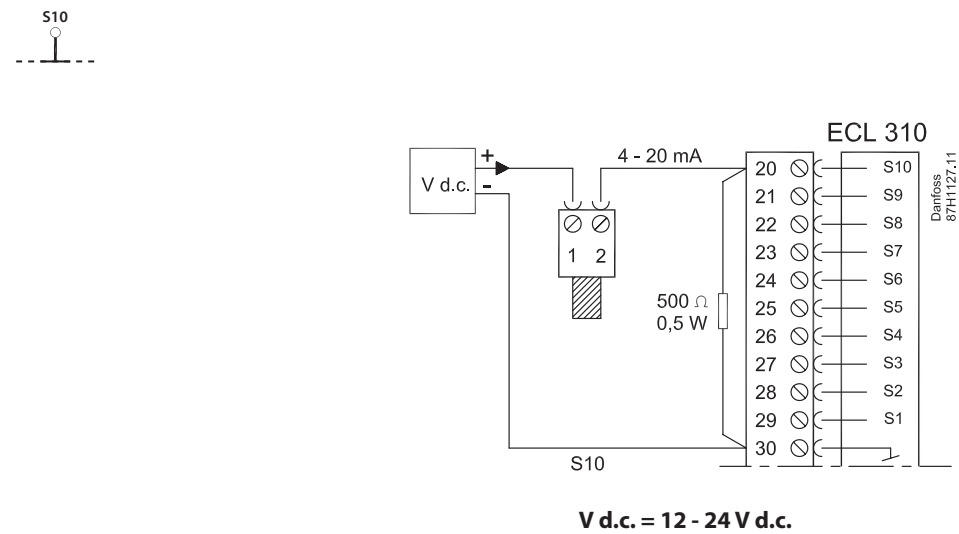


A368 (ECL 310)

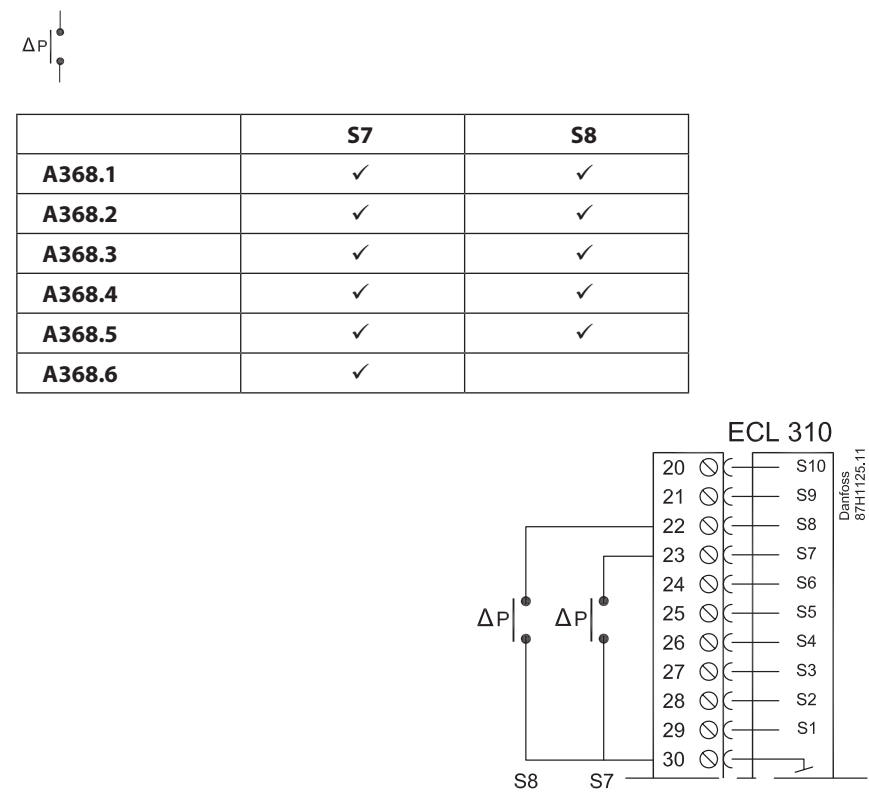

A368 (ECL 310)




S9

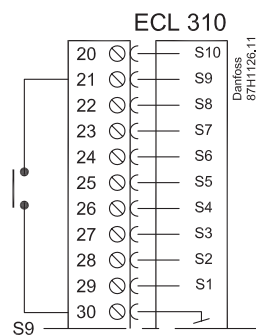


A368, ECA 32

Pt 1000 (1000 Ω / 0 °C)


	S11	S12	S13	S14	S15	S16
A368.1						
A368.2						
A368.3						
A368.4						
A368.5	✓		✓			
A368.6						

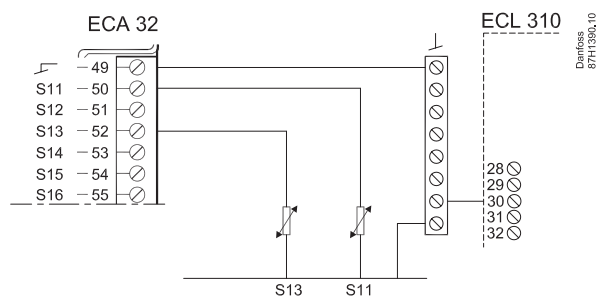

A368, ECA 32

 


	S11	S12	S13	S14	S15	S16
A368.1						
A368.2						
A368.3	✓		✓	✓	✓	✓
A368.4	✓		✓	✓	✓	✓
A368.5				✓	✓	✓
A368.6						

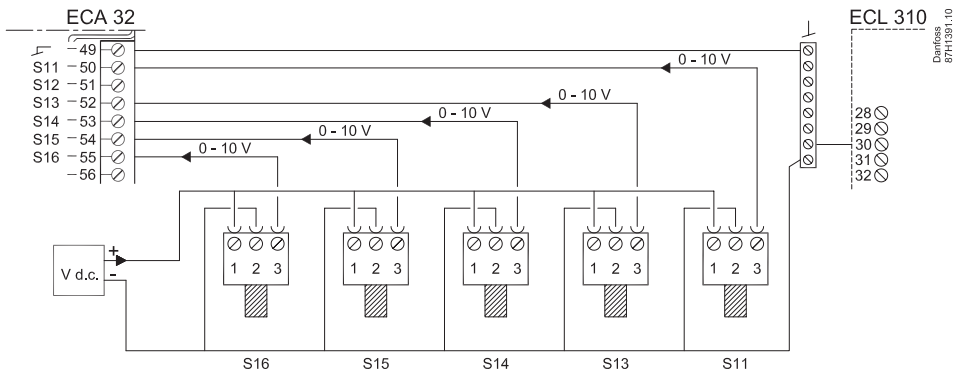

V d.c. = 12 - 24 V d.c.

A368, ECA 32

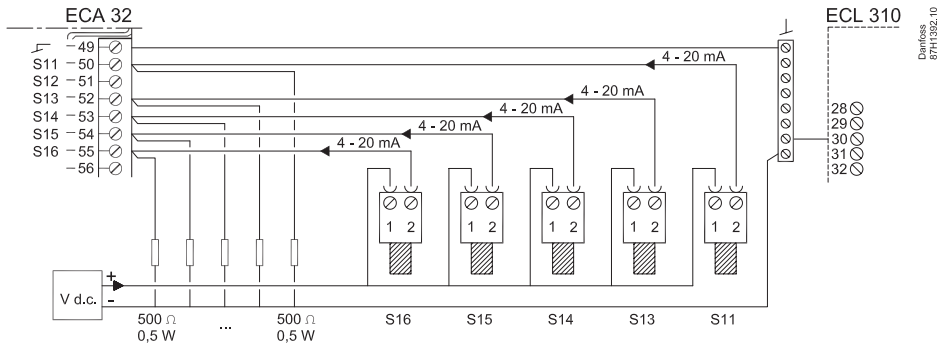


V d.c. = 12 - 24 V d.c.

A368.5, ECA 32



S12


	S12
A368.1	
A368.2	
A368.3	✓
A368.4	✓
A368.5	✓
A368.6	

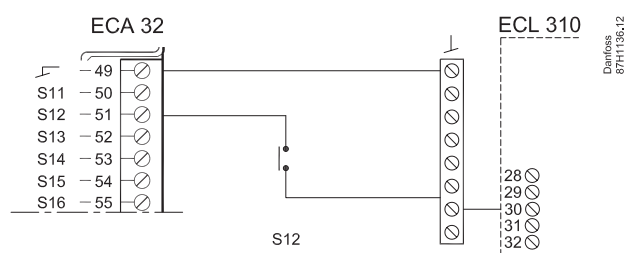



A368.5, ECA 32




F1

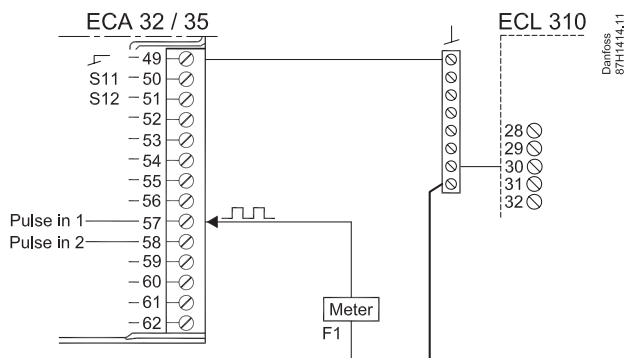


ECA 30 / 31

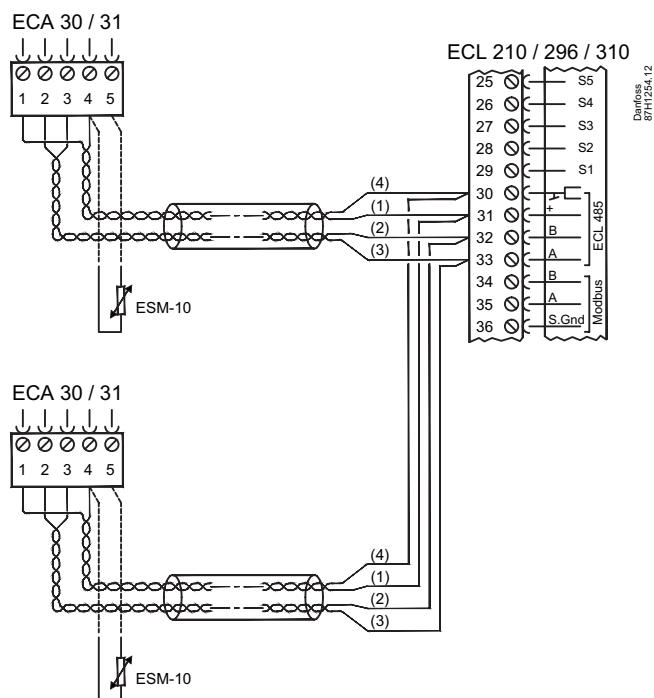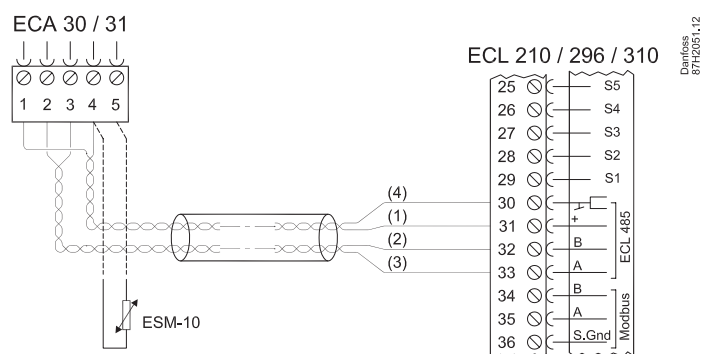


Master / slave

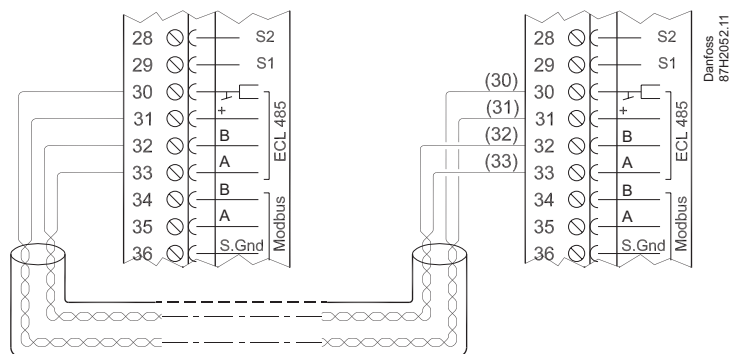


Modbus

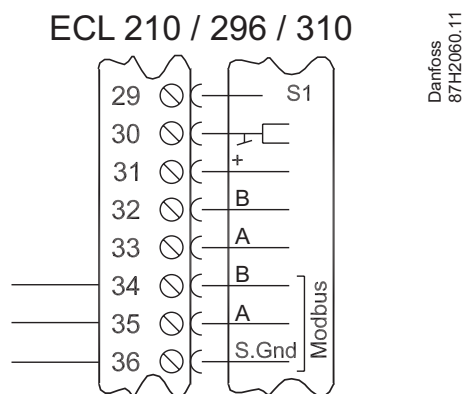



M-bus

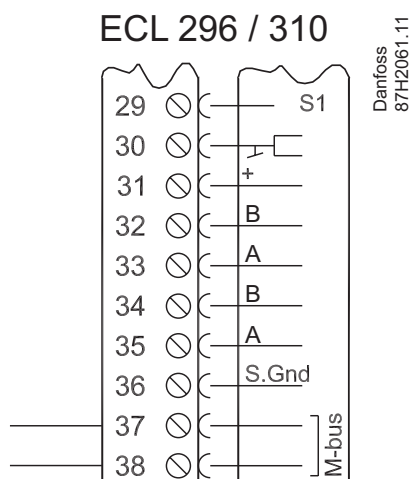

M-bus

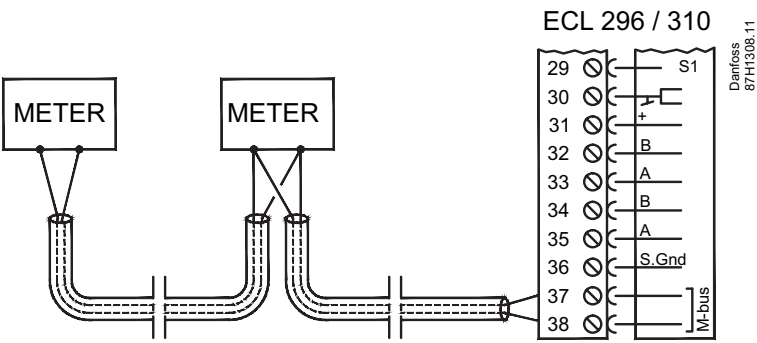


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

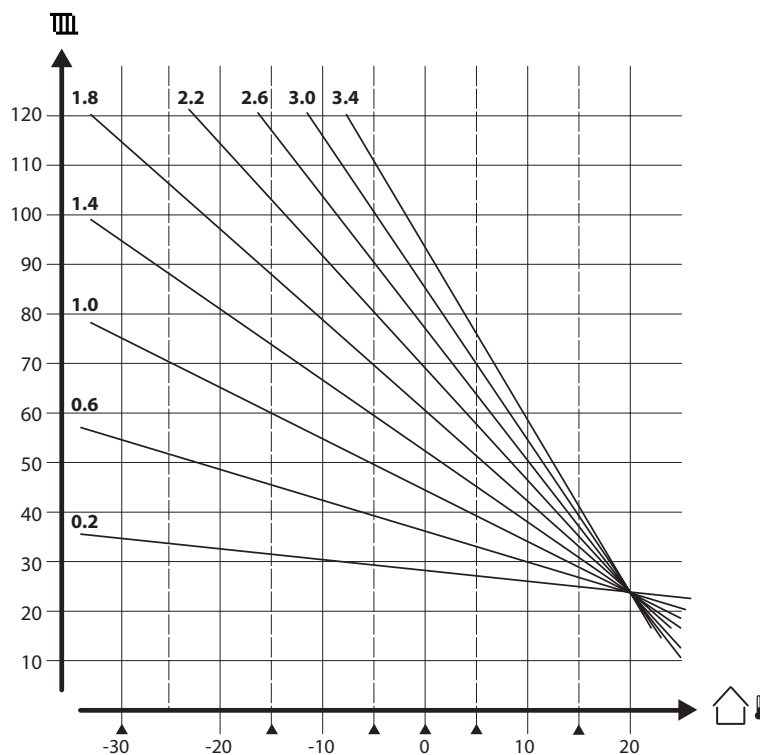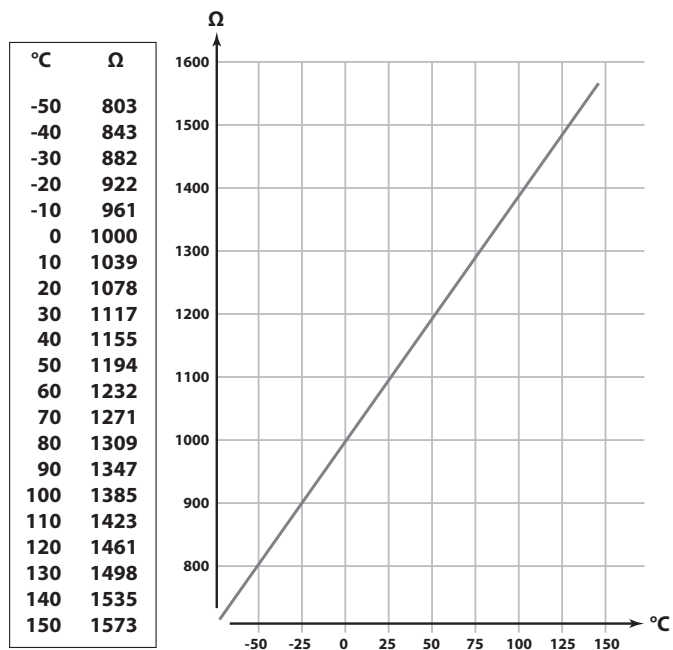


ECA 30


1

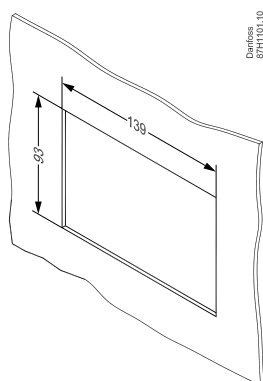


2

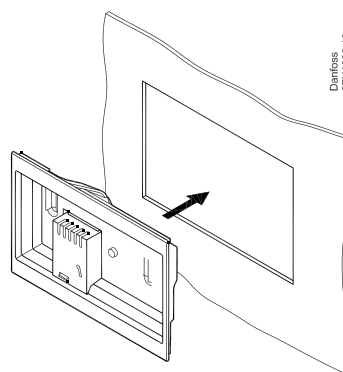


3

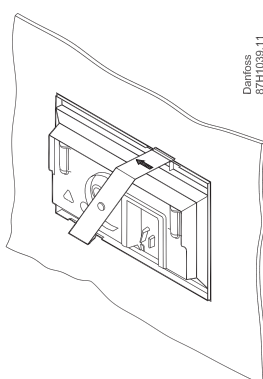


4

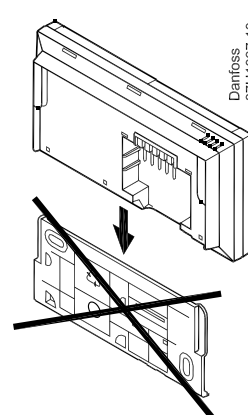


5

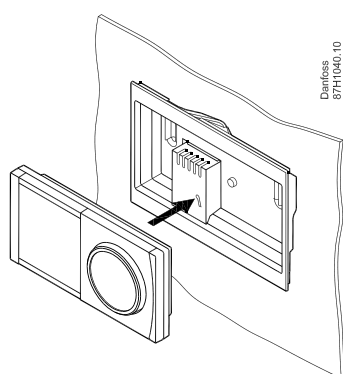


6

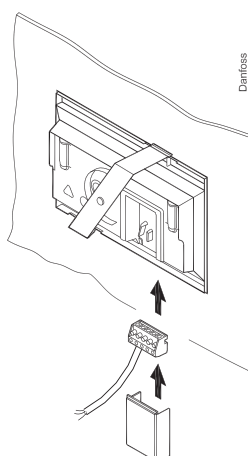

7

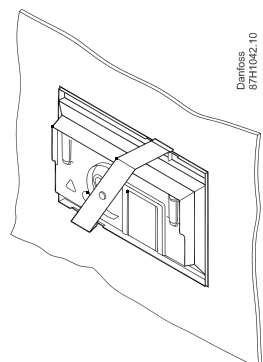


8

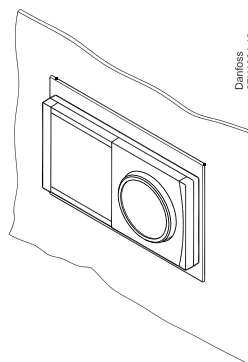


Installation Guide, ECL Comfort 310, A368


Danfoss
87H1021.11

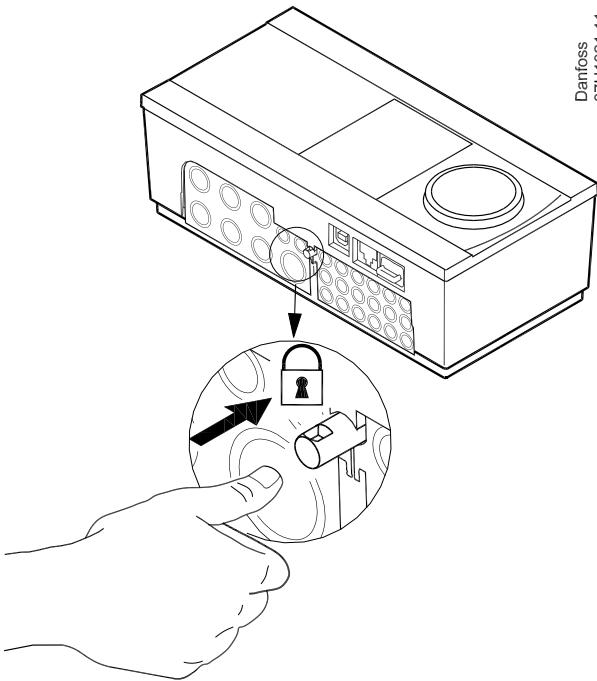


Danfoss
87H1017.11

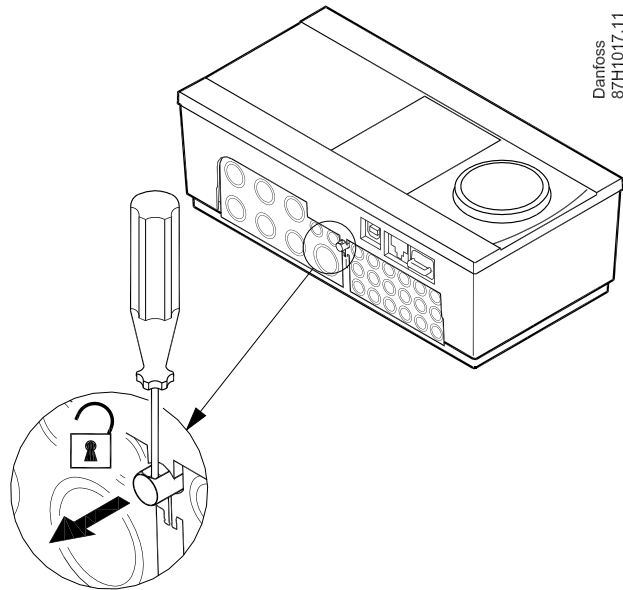

Danfoss
87H1073.11

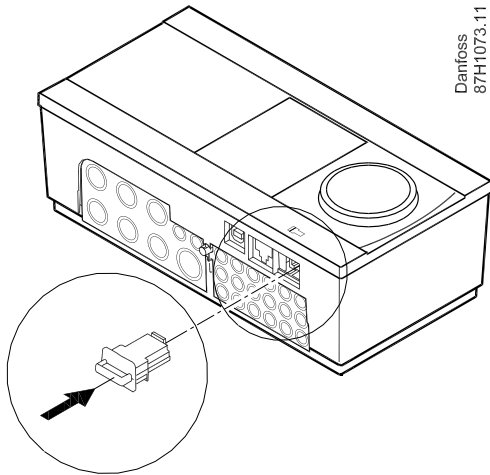

Danfoss
87H1074.11

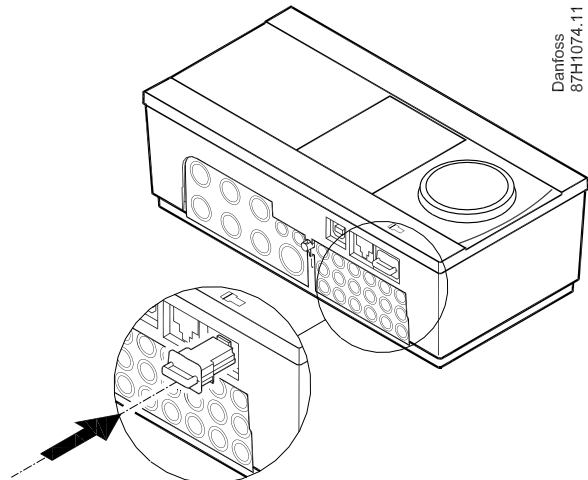

?  **ECL Comfort 310, A368: www.heating.danfoss.com**



* 0 8 7 H 9 0 1 9 *



* V I L G K 5 0 0 *

Danfoss A/S

Heating Segment • heating.danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.