



de	Montageanleitung
en	Mounting instructions
fr	Instructions de montage
sv	Monteringsinstruktion
nl	Montage-handleiding
it	Istruzioni di montaggio
fi	Asennusohje
es	Instrucciones de montaje
da	Monteringsvejledning
pl	Instrukcja montażu
cz	Montážní návod
hu	Szerelési útmutató
el	Οδηγίες εγκατάστασης
ru	Инструкция по установке
zh	安装指南

Ventile PN16
Valves PN16
Vannes PN16
Ventiler PN16
Afsluiters PN16
Valvole PN16
Venttiilit PN16
Válvulas PN16
Ventiler PN16
Zawory PN16
Ventily PN16
Szelepek PN16
Βάνες PN16
Клапаны PN16
阀门 PN16


VVI46../2
VXI46../2

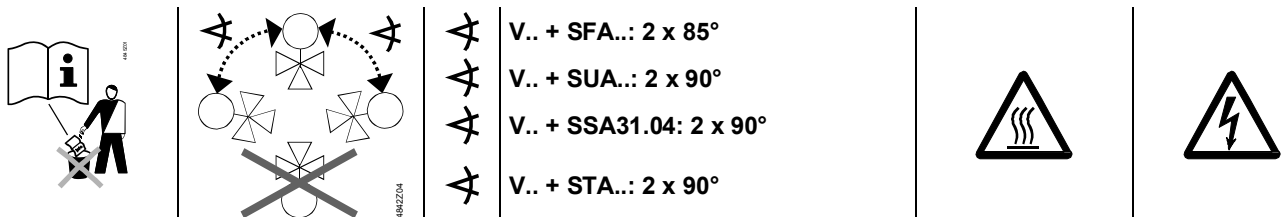


1a

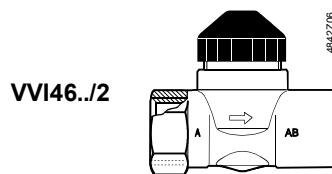


2a

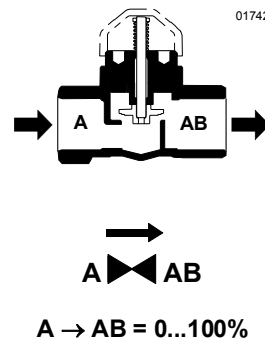


3a

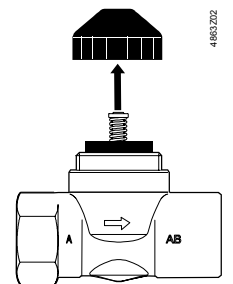


1b

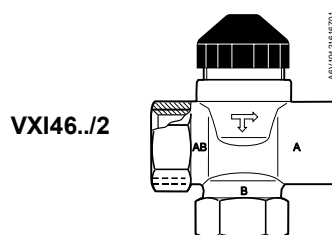


2b

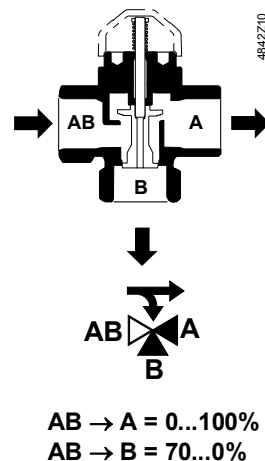


3b

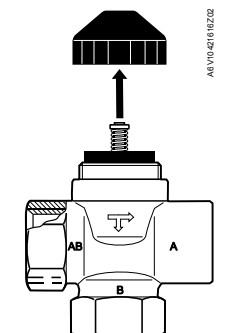


V..I46../2 + SFA..

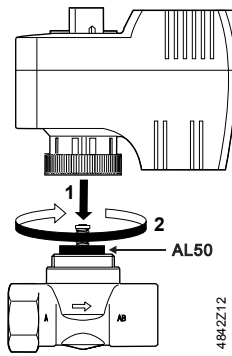




V..I46../2 + SUA..

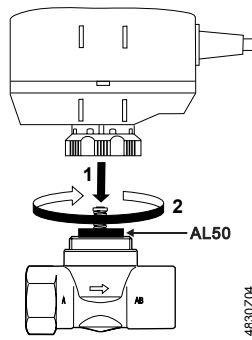

V..I46../2 + SSA31.04

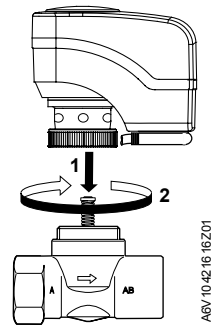


V..I46../2 + STA..

  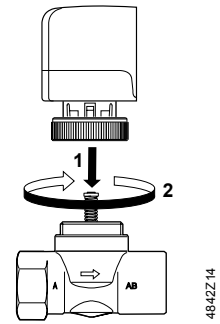


4842Z13


VXI46../2 + SFA.. / SUA.. / SSA31.04 / STA..

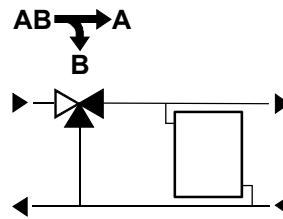

VVI46../2

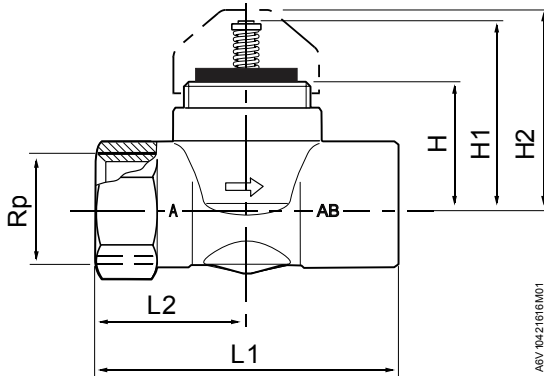

VXI46../2

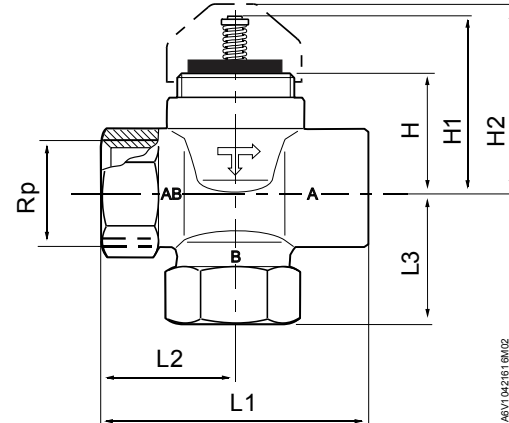

	DN	Rp	H1	H2	L1	L2
		[Inch]	[mm]	[mm]	[mm]	[mm]
VVI46.15/2	15	Rp 1/2	45.2	48	60	30
VVI46.20/2	20	Rp 3/4	45.2	48	65	32.5
VVI46.25/2	25	Rp 1	45.2	48	84	45

	DN	Rp	H1	H2	L1	L2	L3
		[Inch]	[mm]	[mm]	[mm]	[mm]	[mm]
VXI46.15/2	15	Rp 1/2	45.2	48	60	30	30
VXI46.20/2	20	Rp 3/4	45.2	48	65	32.5	32.5
VXI46.25/2	25	Rp 1	45.2	48	84	45	40
VXI46.25T/2	25	Rp 1	45.2	48	84	42	40