

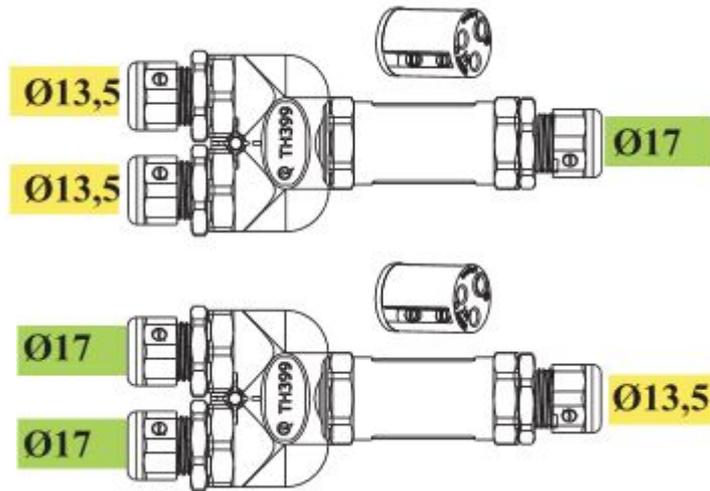
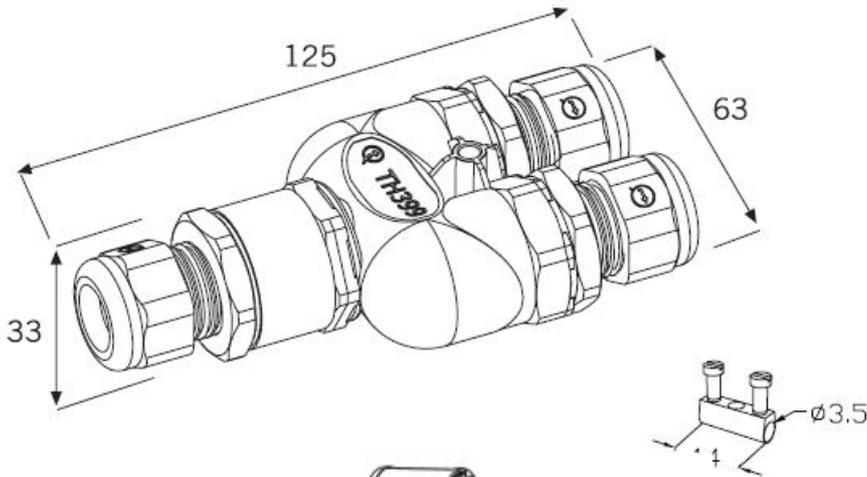
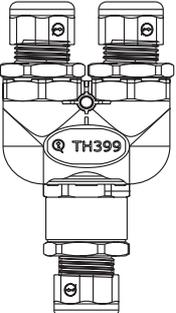
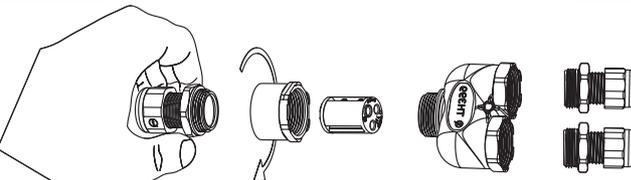
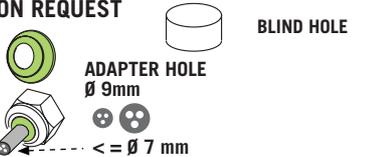
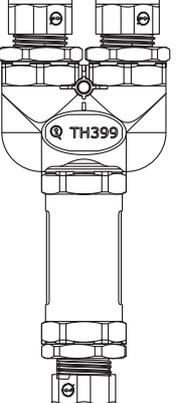
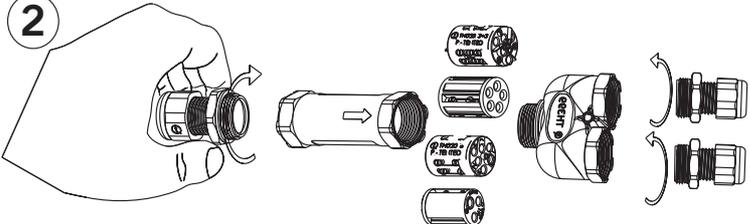
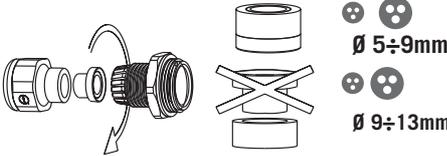
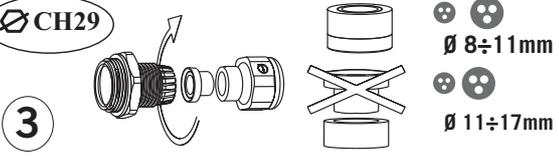


Mont žas instrukcija



<p>TH399 MINI 2-3 POLI</p> <p>1</p> 	<p>2</p> 	<p>ON REQUEST</p> <p>BLIND HOLE</p> <p>ADAPTER HOLE Ø 9mm</p> <p>≤ Ø 7 mm</p> 
<p>TH399 2-3-5-6 2+2-3+3 POLI</p> <p>1</p> 	<p>2</p> 	<p>ON REQUEST</p> <p>BLIND HOLE</p> <p>ADAPTER HOLE Ø 9mm</p> <p>≤ Ø 7 mm</p> 
	<p>3</p> <p>Ø CH24</p> <p>Ø 5÷9mm</p> <p>Ø 9÷13mm</p> 	<p>3</p> <p>Ø CH29</p> <p>Ø 8÷11mm</p> <p>Ø 11÷17mm</p> 

4

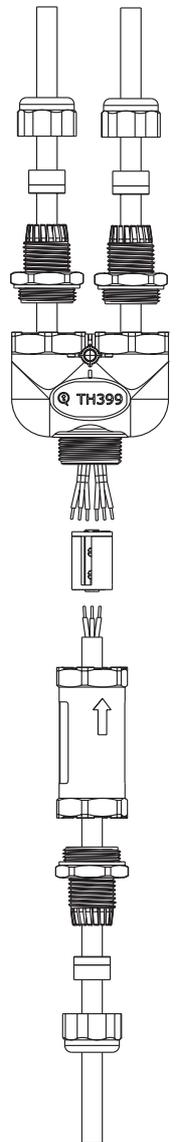



2 P
3 P

5





2+2 P
3+3 P

5 P





6 P

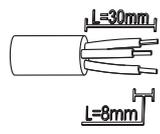





3 POLES

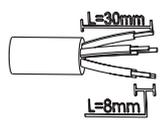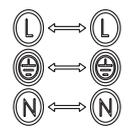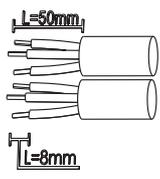



5 POLES

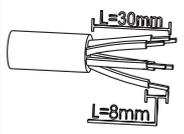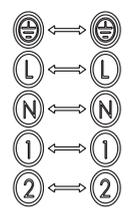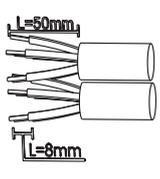


6 POLES

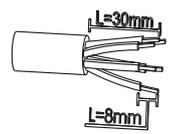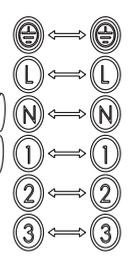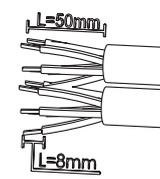


2+2 POLES
3+3 POLES

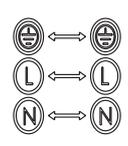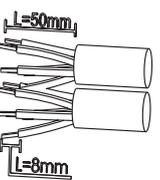


6

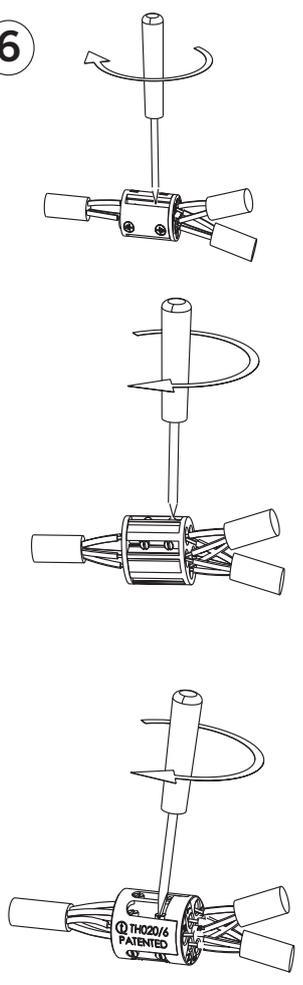


7

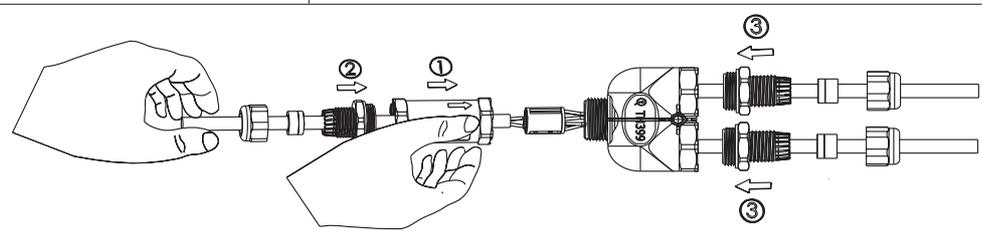

8

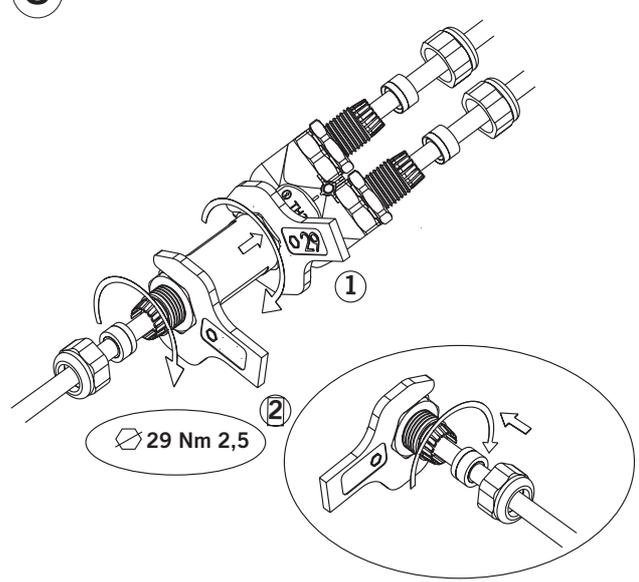

9

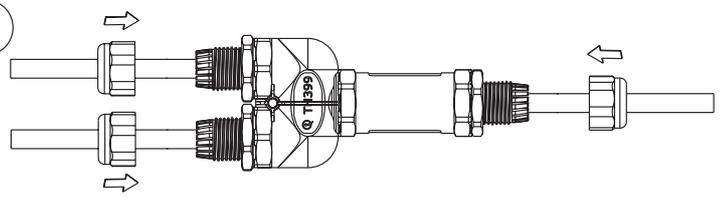

10

