



## Installation instructions for Curaflex® pipe sleeves

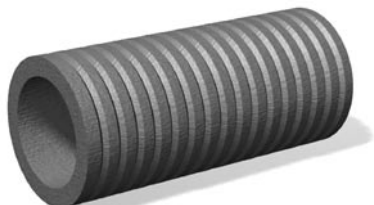

Curaflex® 3000

- Curaflex® special fibre cement pipe sleeve 3000 and 3000/T
- Steel pipe sleeve Curaflex® 9000


Please observe all instructions for installation of Curaflex® pipe sleeves. As Doyma sealing systems are continually developed further, technical changes will be effected without prior notice.

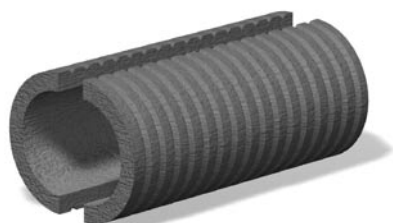

Curaflex® 3000/T



### Important:

- Duct and sealing systems are not fixed points and cannot have a load bearing function. They are exclusively designed to provide a flexible and perfect sealing.

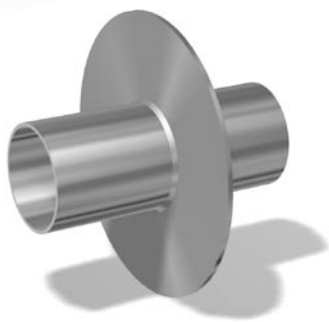

Curaflex® 9000

## Handling instructions for special fibre cement pipe sleeves

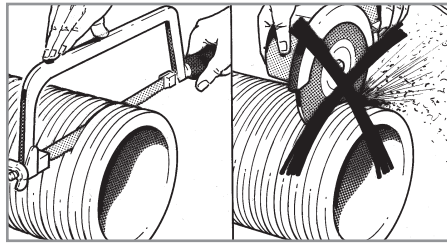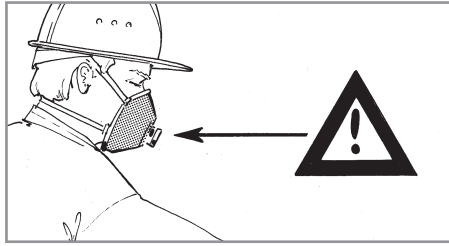


Doyma supplies special fibre cement pipe sleeves in all required lengths and rework on site is not necessary. If due to changes on site pipe sleeves have to be machined, please observe the following:


- Trimming of a fibre cement pipe sleeve must always be done on the "dry side" only.
- Where possible, the fibre cement pipe sleeve should only be cut out-of-doors or in well-ventilated rooms.

- Only use hand-operated or low-speed machines with dust collector.
- Wear a dust mask as per EN 149: 2001 FFP 12360.
- Moisten the fibre cement pipe sleeve before cutting or drilling.


## Installation instructions for special fibre cement pipe sleeve Curaflex® 3000 / Curaflex® 9000

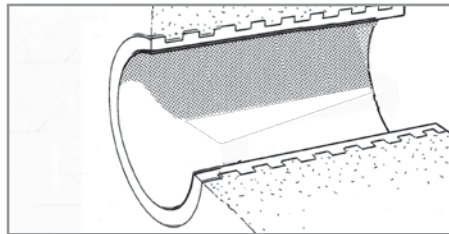


Install flush with shuttering.

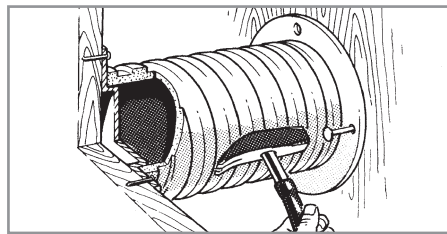

Position sleeve in shuttering using formwork fasteners Curaflex® 1701\*. For each sleeve two units are needed.

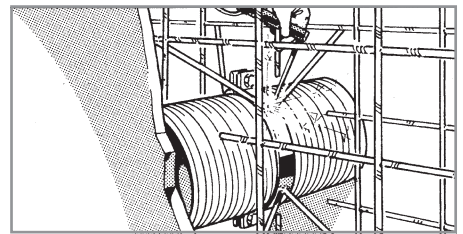


III.: Positioning and installation in steel formwork with a pipe clamp (provided by the customer) welded to the reinforcement..

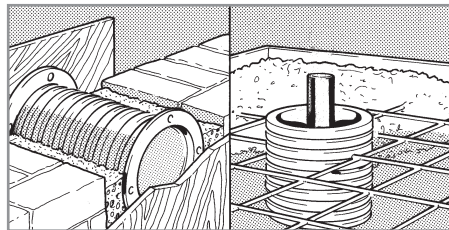


Wall mounting.

Floor/ceiling mounting

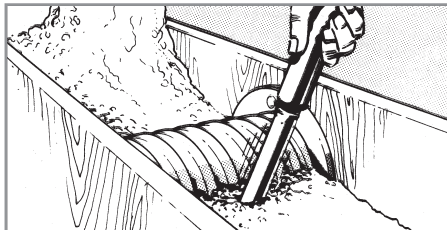


Carefully compact concrete around pipe sleeve.

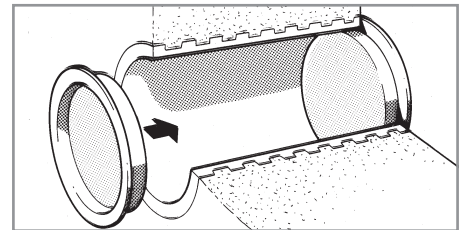


Use protection caps Curaflex® 1702\* to protect pipe sleeve during construction work.

## Additional installation instructions for special fibre cement pipe sleeve Curaflex® 3000/T (split form)

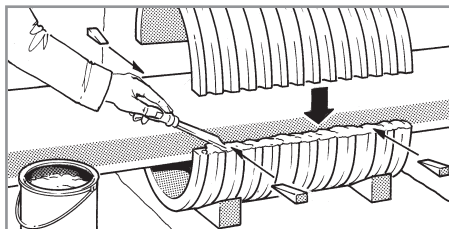

Apply concrete adhesive Curaflex® 1740\*, distance between the half pipes to be 2 mm.

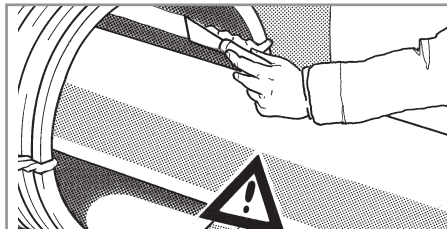

Spread concrete adhesive evenly and make sure that the inner surface of the sleeve becomes a homogeneous contact surface for sealing\*\*.

\*) Accessories to be ordered extra.

\*\*) Attention!

Make sure that bonded pipe sleeve is centrally positioned and fixed around existing pipe/cable before casting the wall.

■ DOYMA allows a 25 years guarantee! For more information see [www.doyma.co.uk](http://www.doyma.co.uk)